



Manufacturers of Agricultural Machinery

Hi-Spec Vertical Feeder

Operators Manual



Models:

V7, V10, V12, V14, V16

T14, T16, T18, T20, T24, T27, T32

rev - vf104

Hi-Spec Engineering Ltd.

Station Rd, Bagenalstown, Co. Carlow

Tel: +353 (0) 59-9721929 / 9721992

Fax: +353 (0) 59-9721980

Website: www.hispec.net

E-mail: sales@hispec.net





Introduction

Congratulations on Purchasing a Hi-Spec Vertical Feeder.

Please Read the Following Manual Before Using Machine.

The way you care for and maintain this machine will decide its future performance. This manual has been carefully written to help you maintain the condition of your machine. Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or machine damage.

Hi-Spec Vertical Feeders have been designed and manufactured in compliance with the following directives and standards;

Machinery Directive 2006/42/EEC.

Harmonised standards;

EN ISO 12100-1:2003, Safety of machinery Part 1: Basic terminology, methodology

EN ISO 12100-2:2003, Safety of machinery Part 2: Technical principles

EN ISO 4254-1:2005, Agricultural machinery -- Safety -- Part 1: General requirements

EN ISO 14121-1:2007, Safety of Machinery – Principle of Risk Assessment

BS EN 703:2004+A1:2009, Agricultural machinery – Silage loading, mixing and distributing machines - safety

This manual should be kept within the vicinity of the machine at all times and should be considered a permanent part of your machine. It should remain with the machine should you decide to sell it.

Warranty is provided as a part of Hi-Spec Engineering's support program for customers who operate and maintain this machine and equipment as described in this manual. This warranty provides you the assurance that Hi-Spec Engineering will back its machines should defects appear within the warranty period. If the machine is abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and improvements may be denied.

All information, illustrations and specifications in this manual are based on the latest product information available at the time of publication.

It is the policy of Hi-Spec Engineering to improve its products and designs whenever it is practical and possible to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to make such changes on products sold previously

Thank You for Choosing Hi-Spec Engineering

Contents

Introduction.....	3
Contents	4
Designated Use of Machine.....	6
Technical Specifications and Dimensions.....	7
Safety.....	8
Recognise Safety Information	8
General Safety	9
Safety Checklist	9
Description of Safety Warnings and Instructions.....	12
PTO Shaft Safety.....	13
Getting Started	14
Tractor Requirements	14
Connecting Feeder to Tractor	15
Fitting PTO Shaft.....	16
Road Transportation.....	17
Emergency Breakaway Handbrake.....	18
Operating Instructions.....	20
General Instructions.....	20
Ladder Operation	22
Counter Knife Operation	23
Hydraulic Counter Knives	24
Manual Counter Knives	25
Loading Instructions	26
Feedout Instructions.....	27
Vertical Feeder Equipped with One Door with Teaser and Manually Adjusted Chute Height.	27
Vertical Feeder Equipped with Two Feedout Doors with Teasers and Manually Adjusted Chute Height.	29
Vertical Feeder Equipped with One Feedout Door with Teaser and Hydraulic Chute.....	31
Vertical Feeder Equipped with Two Feedout Doors with Teasers and Hydraulic Chutes.	33



Vertical Feeder equipped with Cross Conveyor	35
Vertical Feeder equipped with Cross Conveyor and Elevator.....	37
Vertical Feeder equipped with VHD Cross Conveyor.....	39
Vertical Feeder equipped with Straw Blower	41
Vertical Feeder Equipped with One Feedout Door with Teaser and Elevator	43
Vertical Feeder Equipped with Two Feedout Doors with Teasers, One Elevator and One Chute.....	46
DINACOM 2 Hand Control Unit	47
Troubleshooting for DINACOM2 Hand Control Unit.....	49
Dinacom2 Hand Control Unit Basic Layout	52
Position of EV Driver Unit.....	52
Maintenance.....	53
Correct Maintenance and Inspection Procedures	53
Maintenance Safety	53
Recommended Maintenance.....	55
Wheel removal/refitting	56
Gearbox Maintenance.....	58
Elevator Maintenance	59
Greasing Points on Feeder	60
Troubleshooting	62
How to Adjust the Pressure Sequence Valves	63
Electrical Faults.....	63
Vertical Auger Feeder Hydraulic & Electrical Control box Details.....	64
Sales and Service	65
Warranty.....	66
Conditions of Sale	67
Registration Forms	70
Registration Forms	72
Declaration of Conformity	74


Designated Use of Machine

The Hi-Spec Vertical Feeder is exclusively designed to mix and dispense feed in a controlled environment, e.g. level stable ground such as a cattle shed, using low power requirements and low maintenance costs. Ensure the machine is level to get the best results while mixing.

Hi-Spec Engineering will not be held responsible for any loss or damage resulting from machine applications other than those specified above. Any other use the machine may be put to is entirely at the owners/operators risk. The Designated use of a Vertical Feeder includes that the operating, maintenance and repair instructions given by the manufacturer will be strictly fulfilled. Designated use means operating the Vertical Feeder is exclusively for persons familiar with the machine and fully aware of the associated risks involved in operating it.


By any alteration of safety equipment, the Declaration of Conformity, as well as the CE sign on machine loses its validity

Technical Specifications and Dimensions

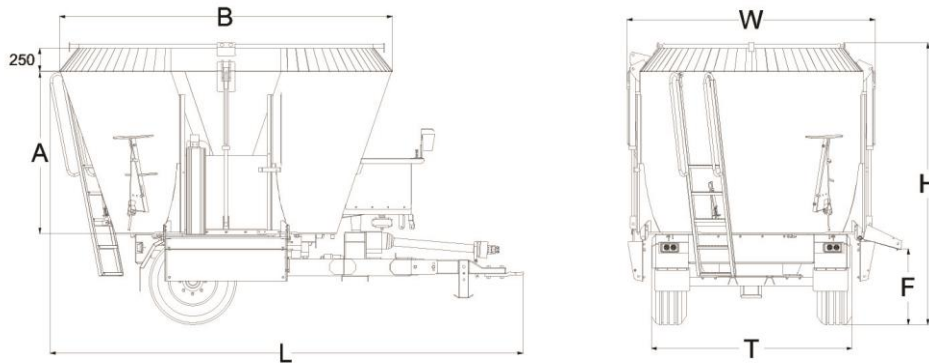

Model	Capacity	Height (H)	Width (W)	Length (L)	Body Height (A)	Body Length (B)	Track Width (T)	Feedout Height (F)	Unladen Weight	Wheel Size
Single Auger	m ³	mm (ft)	mm (ft)	mm	mm	mm	mm	mm	kg	
V7	7	2610 (8'6")	2220 (7'3")	4280	1800	2940	1685	610	3600	30x11.5-R14.5
V10	10	2910 (9'7")	2620 (8'7")	5110	1600	3500	2190	800	4700	355/50-22.5
V12	12	3060 (10')	2620 (8'7")	5160	1750	3600	2190	800	5000	355/50-22.5
V14	14	2910 (9'7")	3020 (9'11")	5550	1600	3900	2540	800	5900	355/50-22.5
V16	16	3110 (10'2")	3020 (9'11")	5600	1800	4000	2540	800	6400	355/50-22.5
Twin Auger	m ³	mm (ft)	mm (ft)	mm	mm	mm	mm	mm	kg	
T14	14	2700 (8'9")	2220 (7'3")	6520	1750	5070	1940	800	6000	235X75-R17.5
T16	16	2975 (9'9")	2220 (7'3")	6570	1800	5210	1940	800	6500	235X75-R17.5
T20	20	2820 (9'3")	2620 (8'7")	7332	1600	5850	2400	800	7260	235X75-R17.5
T24	24	3020 (9'11")	2620 (8'7")	7532	1800	6050	2400	800	7660	235X75-R17.5
T27	27	3400 (11'2")	2860 (9'5")	7640	1980	6130	2400	825	8660	385/55 R19.5

Widths based on machines with one door

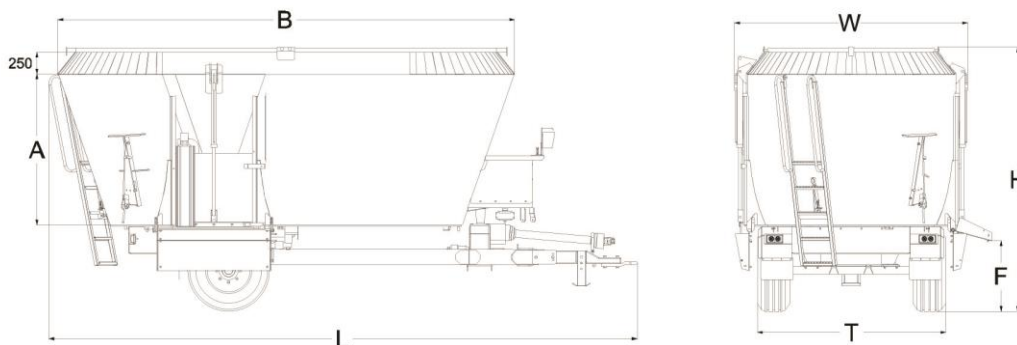

Safety

The Hi-Spec Vertical feeder has been designed with many safety features built in to its design but ultimately, safe operation and maintenance is the responsibility of the operator.

Recognise Safety Information



This is a safety alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury

Follow the recommended guidelines for safe operating practice:

Understand signal words: - On machine safety signs, signal words give the level of the hazard

Danger

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury

Warning

Indicates a potentially more hazardous situation which, if not avoided, could result in death or serious injury

Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury

You will find these signs located near specific hazards on your machinery

Please pay attention to these signs for your own safety

Safety signs should be maintained and replaced when necessary. They can often become dirty, torn or unreadable due to dirt and wear and tear

If you need a replacement sign or have lost your user manual, please contact your Hi-Spec authorised dealer or Hi-Spec Engineering directly and we would be happy to issue you with a replacement

General Safety

- Keep a first-aid kit and a fire extinguisher close by at all times, if possible, on your tractor with this operator instruction manual.
- Have an emergency plan.
- Keep all emergency numbers close by; write them into your manual.
- Inspect your machine carefully each time before use; this will only take a minute.
- Always climb the ladder and check inside the machine before starting or filling it, to make certain it is empty.
- Stop machine when leaving unattended.
- Children should never be in the area when your Feeder is in operation.
- Using a Vertical Feeder is a one-man operation therefore there should be no other person(s) in the vicinity of the machine while in use.
- Remember that the first step to avoiding danger is to recognise the hazards.
- When stopping the machine always ensure a SAFE STOP
 - Handbrake ON
 - Controls to Neutral
 - Engine OFF
 - Remove key

Safety Checklist

- ✓ Always disconnect all power sources before carrying out any adjustment or maintenance.
- ✓ Always check inside the machine to make sure it is empty.
- ✓ Always check around the machine making sure everything is in order; this will only take a minute.
- ✓ Study this manual. Provide training to new users. Like all farm machinery, any machine is potentially dangerous when under the control of untrained personnel.
- ✓ Exercise extreme care when loading feed and additive into the machine.
- ✓ Always ensure guards and other safety devices are kept in good working order. Replace if necessary.
- ✓ Keep clear of all moving parts.

- ✓ Always connect the shear bolt end of the PTO shaft to the tractor.
- ✓ Always use shear bolts recommended to you by Hi-Spec Engineering.
- ✓ Always keep all hydraulic hoses and electric cables clear from PTO shaft.
- ✓ Always apply the handbrake before unhitching and park the machine in a level area.
- ✓ Always use ladder for mixing inspection point. Do not climb up the side of the machine. Remember to fold up ladder after each inspection.
- ✓ Always take extra precautions when using the machine on hilly or sloping ground.

- X Never permit young persons or spectators to operate PTO driven equipment or stand anywhere close by when the machine is in operation.
- X Never permit untrained personnel to operate the machine without reading this manual and or receiving training.
- X Never operate the machine without having all guards in place; they are there for your safety and protection against serious injury and death.
- X Never remove guards while there is still power going into the machine, all power must be off!
- X Never enter the machine while in operation. The mixing chamber is extremely dangerous, there is a risk of fatal injury if you enter the mixing chamber while components are moving, never under any circumstance enter the mixing chamber. If you need to enter the mixing chamber for maintenance, please see instructions in the maintenance section..
- X Never wear loose clothes when operating machinery, if standing too close, your clothing can pull you into the machine.
- X Never operate the machine if you think there could be large stones or foreign objects inside, they could cause serious damage to your machine.
- X Never leave the machine running when unattended.
- X If the machine should become blocked with a stone or foreign object, DO NOT attempt to free the object while the tractor is running. Stop the tractor, engage handbrake, controls to neutral, engine off and remove key.
- X Do not climb into the machine using the ladder or control box at the front or rear of the machine
- X Do not stand on the ladder whilst the feeder is in transit, the vertical feeder should never be used for the transport of people, animals or objects.
- X Do not attempt to climb on the machine, either the front control box or the compartment top edges.



Description of Safety Warnings and Instructions

The following is a list of safety signs and warning labels on the Hi-Spec Vertical Feeder. Look carefully and make sure you know where on the machine they are positioned and what they mean.

It is important you are fully aware of the areas of risk on your machine.

Keep a safe distance from the revolving Rotor while feeder is in operation.



General danger sign. There is a danger of rotating parts and foreign objects.

Keep clear of machine while working.



This safety sign is to remind the operator to disengage the PTO before turning



Do not stand between the machine and the tractor while the PTO is in operation.

Keep clear of machine while working.



PTO Shaft Safety

The PTO shaft is a vital link in driving the machine. It is also a very dangerous piece of equipment, therefore it is important to follow the manufacturer's guidelines on maintenance and repair. These guidelines are fixed to the PTO when new. They should be removed, read carefully and then stored with this instruction manual for future reference. If the guidelines are missing from the PTO Shaft please contact your Hi-Spec dealer for another copy.

The irregular shape and connection joints of a turning shaft can cause serious injury. The rotational force of the shaft is the main hazard.

Do not wear loose fitting clothing or articles such as jewellery that might get caught in a turning PTO. The rotation of the PTO is 540 rpm when mixing. Accidents can happen very fast therefore keep a safe distance from the shaft when it is in use.



PTO Shafts account for most of tractor related fatalities.

**Make sure the shaft is guarded.
Replace the guards when they are
Damaged or missing.
Never use the machine with
Damaged or missing guards
In an emergency situation, take the PTO
Out of gear, stop the engine and set the brake.**



Getting Started

Tractor Requirements

Horsepower

The horsepower needed to power a Vertical Feeder depends on the size of the Feeder and more so the main use of the Feeder.

Hydraulic Requirements

A minimum of two double acting spool valves are required to operate a standard Vertical Feeder.

The hydraulic hoses are colour coded for your convenience and are as follows.

Door Operation

Green – Door Open

Blue – Door Close

Door Operation c/w Hyd. Counter Knives

Green – Counter knife out and Door open (if linked)

Blue – Door close and Counter knife in (if linked)

When using Solenoid Block and Handset

Red – Pressure

Green – Return


More details on hydraulic operations are outlined further in "Operating Instructions".

Connecting Feeder to Tractor

Adjustment of Drawbar

- Use a pickup hitch or a short drawbar.
- Have the machine parked on a level area.
- Adjust the height of the bolt on hitch and/or drawbar to ensure the machine is level when attached to the tractor.


The following diagram shows the different height options available.

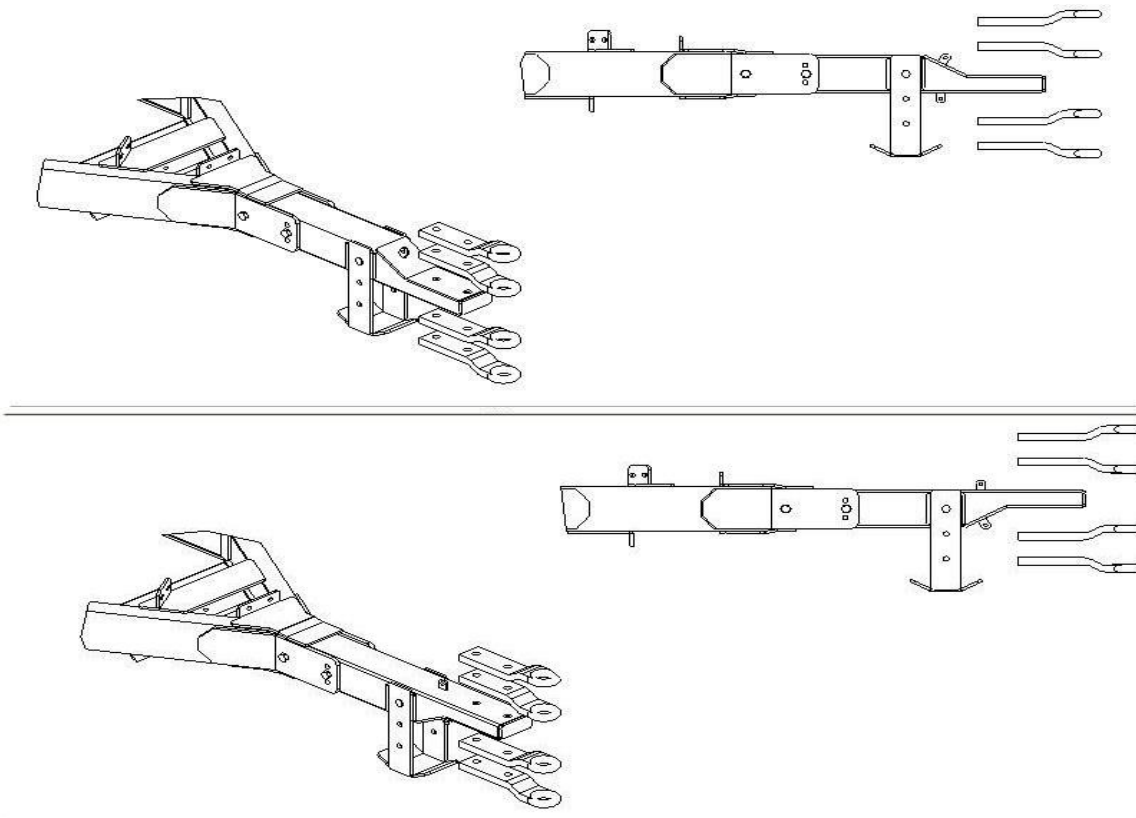

*** Please note:** Drawbar Adjustment Not Available on Twin Auger Models

Fitting PTO Shaft

- Turn the tractor to full lock to either the left or right to get the shortest point of the PTO shaft.
- Slide the PTO apart and fit the half with the shear bolt to the tractor and the other end to the machine.
- Lift the two parts of the PTO shaft up so that they are level with each other.
- Mark 150 mm (6") back from each other as shown in the diagram below.
- Cut off the excess profile.

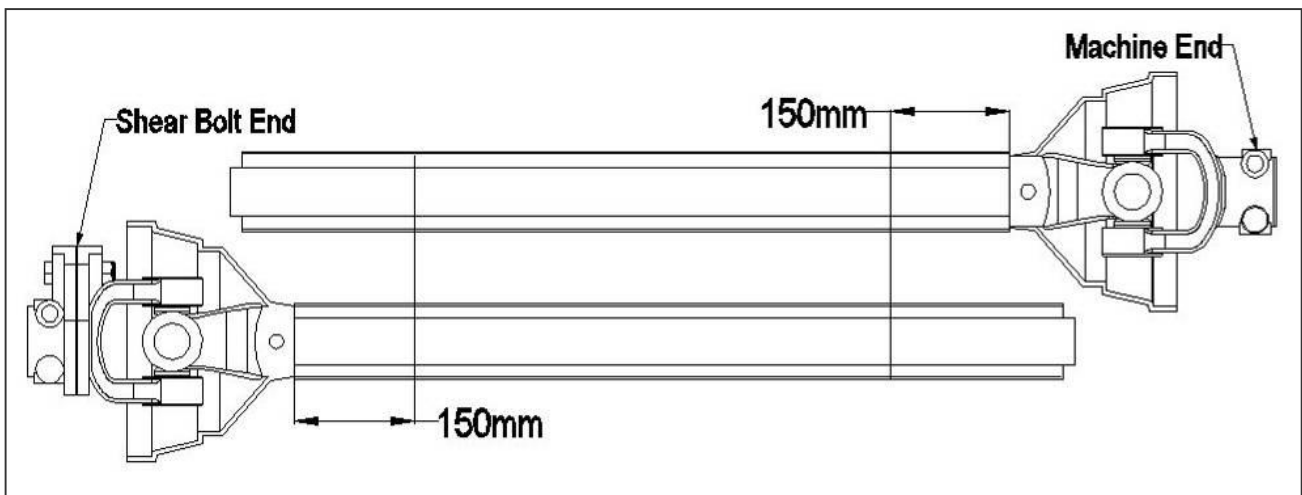

Road Transportation

Before bringing your machine onto a public road, it is important to check thoroughly that the machine is following all of the appropriate guidelines.


- Ensure brakes are connected and working correctly
- Ensure lights are connected and working correctly
- Ensure PTO is disengaged and electronic readout is switched off
- Observe local maximum road speeds for this type of machine
- **Hi-Spec Engineering strongly recommend extreme care to be taken by the operator when travelling on rough roads with a loaded Machine as shock loads will damage the weighbars. Owners and/or operators do so at their own risk.**
- The operator must ensure that any other regulations regarding road use are adhered to.
- Extreme care must be taken when negotiating acute bends with high speed tractors.

Emergency Breakaway Handbrake


The emergency breakaway handbrake should be connected to the tractor every time the diet feeder is been used. It should be done using the wire rope provided. The wire rope should be attached to a solid part of the tractor like the top link pin and not to a panel on the tractor.

The wire rope should be tight enough so it will work effectively if the diet feeder became detached from the tractor but loose enough that the handbrake is not been applied during normal operation.

Handbrake in the **off** position

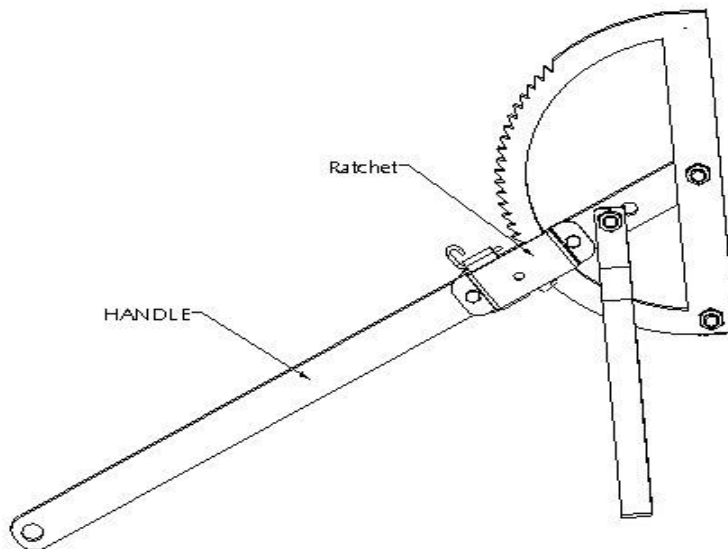


Handbrake in the **on** position

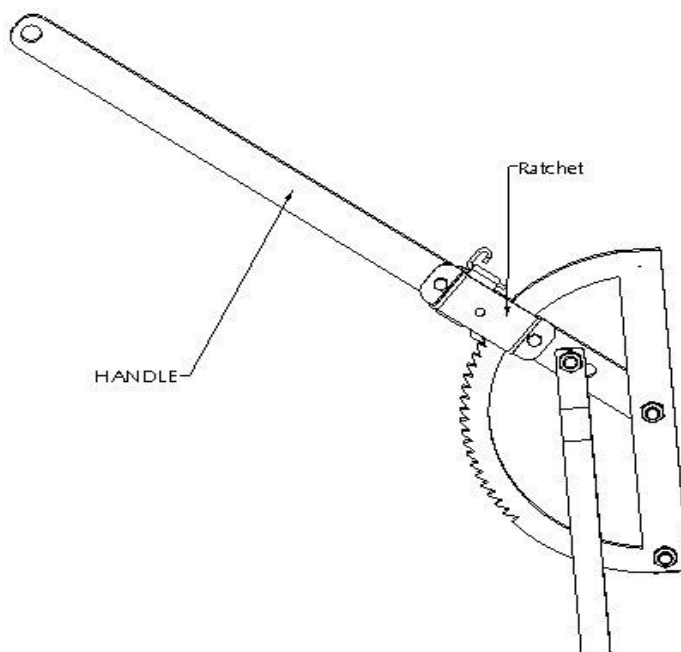

Disengaging the Emergency breakaway handbrake

It is disengaged by following the steps below:

- Make sure the clip in front of the ratchet is facing forward or turned away from the gearbox on the feeder.
- If the clip is turned towards the gearbox the ratchet mechanism will not release.

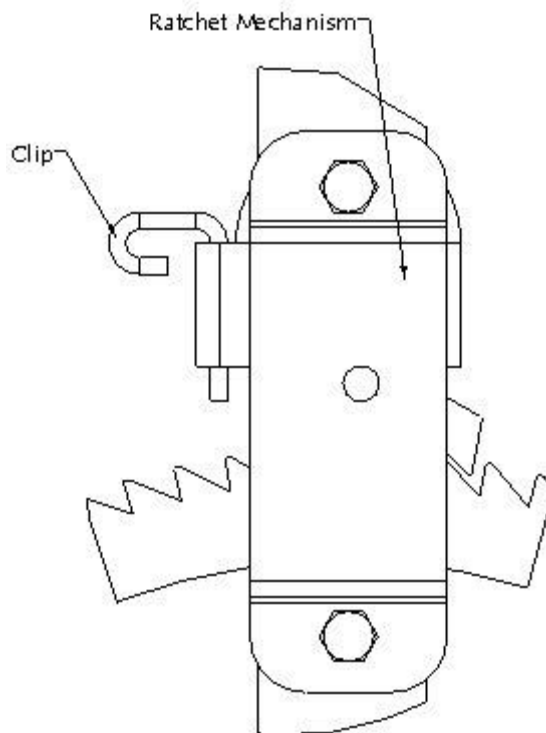

- Push the handle towards the feeder so the ratchet becomes tight against the teeth that hold it in place.
- Pull the handle away from the feeder so the ratchet will disconnect itself from the teeth.
- Push the handle back to its original off position.

WARNING: It is important to check that the handbrake be fully released when the tanker is in use. If the brake is left half applied it will cause damage to the brakes on the diet feeder.

Operating Instructions

General Instructions

- Before using your Vertical Feeder always walk around it making sure everything is in order, this only takes a minute.
- Inspect the mixing chamber, making sure it is empty of any foreign material. Remember to put the ladder back into the transport position once you have finished with it. See Ladder Instructions for further details.
- Inspect the gearbox oil reservoir for oil. Recommended oil is EP100. When the level is between the indicated guides, there is sufficient oil in the gearbox, see Fig.18 for details. Make sure the on/off valve on the gearbox is in the open position; see Fig. 15 of gearbox maintenance for details. **Make sure the machine is on a level surface.** Fill to max level indicator and let oil filter thru system. (Please note this may take some time).
- Ensure that the feedout doors are closed fully and the counter knives are at the correct setting using the stoppers provided. See counter knife settings for further details.
- When you are satisfied everything is as it should be connect the PTO to the tractor. Secure the PTO guard at both ends using the safety chains provided. Ensure the shear bolt end is always towards the tractor.


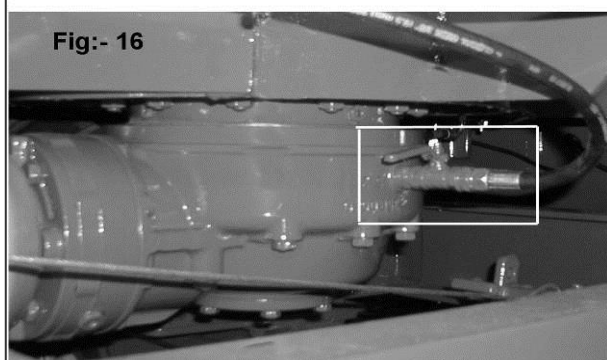


Fig: -18

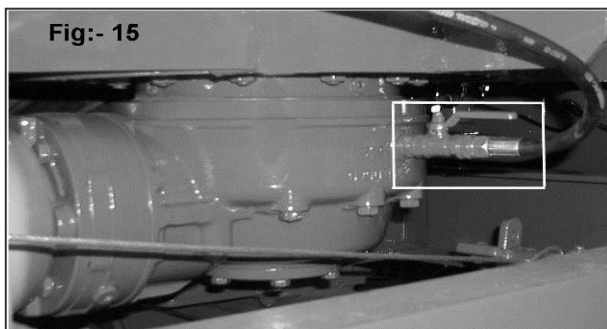


- Connect all Hydraulic pipes to the tractor, inc. the brake pipe.
- Connect the lights plug (seven pin) to the power supply on the tractor.
- Connect the weigher plug (single pin) to the 12 volt power supply on the tractor.
- If the Vertical Feeder comes complete with a control box connect the weigher plug (single pin) and the operation plug (three pin) to the control box provided, see Fig. 12. Connect the power cable from the control box to the 12 volt power supply in the tractor cab.
- **When the machine is not in use the control box or handset must be unplugged from the tractor power supply. The Vertical Feeder hydraulics use electrical power when in operation and if left plugged in while the tractor and Vertical Feeder are not in operation it may drain your tractor battery.**
- Adjust the weigher control to the required setting; see your weigher operator manual for details. Do not attempt to adjust your weigher system without referring to the operator manual, which has been supplied to you with your machine.
- On Vertical Feeders equipped with a two speed gearbox the high speed should be used for normal operation. If however the operating tractor has not adequate power then the low speed should be selected. Tractors with more than 70 HP should have no difficult operating in the high speed.
- When filling the mixing chamber, ensure the Vertical Feeder is reasonably level.
- For Vertical Feeders equipped with manually adjusted chute height the height of the chute should be set before loading of the Vertical Feeder.
- To adjust the height of the chute for the first time remove the chain from the door using the joining link provided. Open the feedout door to the maximum. Set the required height of the chute using the chain and joining link by connecting it to the door. The feedout door can now be closed again and the chute should return to its transport position.
- You are now ready to engage the PTO and increase its speed to 540 rpm for chopping and mixing.


Ladder Operation

- The ladder at the rear of the Feeder is provided to allow the operator view the mixing chamber. It must not be used for loading ANY feedstuffs or materials into the machine.
- When not in use the ladder should always be folded into the transport position to avoid unnecessary damage. No persons should be permitted to ride on the ladder while the machine is in motion.
- No person should use the ladder while the Feeder is being loaded.

Ladder Transport Position

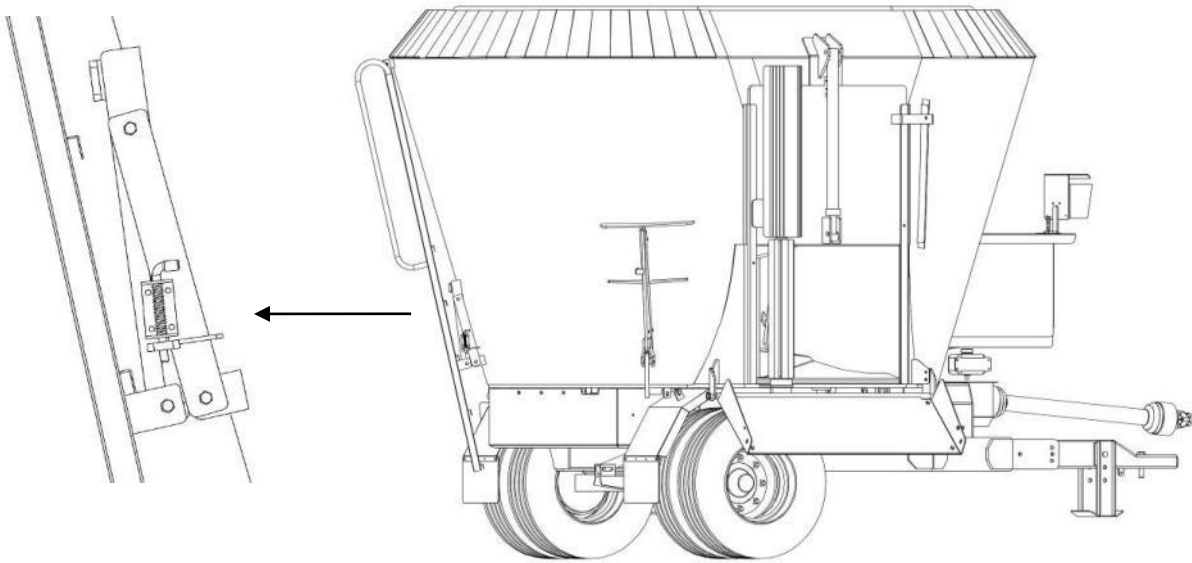

Ladder Work Position

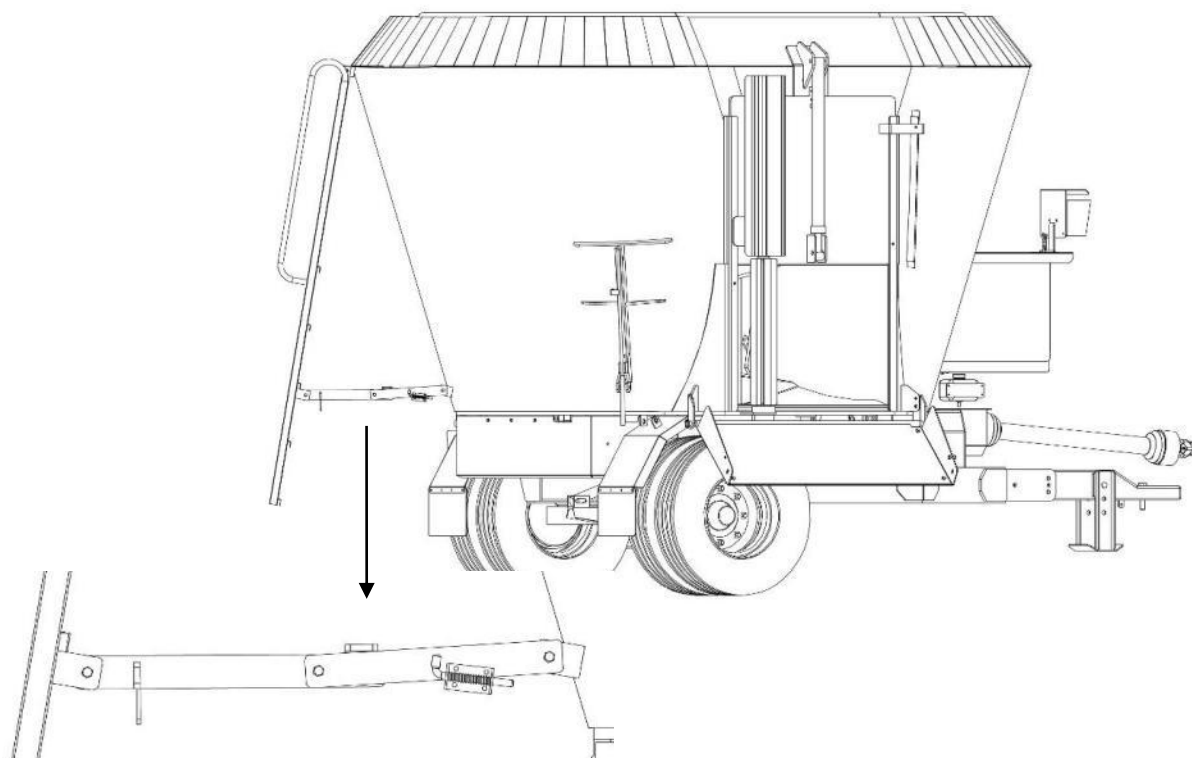

Counter Knife Operation

The counter knives on your Vertical Feeder are operated in one of three of the following ways, manually, hydraulically or hydraulic sequence.

If no chopping is required only mixing the counter knives should be retracted fully and the setting handles or pins should be in position 6.

For manual operation use the pin provided to set the desired position of your counter knives. It is only possible to set this position with the vertical feeder empty.

For hydraulic operation use the pin provided to set the maximum depth the counter knives can protrude into the body of your vertical feeder.

For hydraulic sequence of the counter knives on your vertical feeder the counter knives are operated in sequence with the operation of the feedout doors.

The sequence is as follows:- Counter knives retract fully from inside the body before the feedout door begins to open and subsequently the feedout door closes fully before the counter knives protrudes into the body. It is necessary to hold the hydraulic lever in the on position for a few seconds after the door is closed in order to set the counter knives in the pre set position.

For chopping of silage bales the best results are usually obtained with the counter knives retracted fully, position 6. Occasionally better results can be achieved by using positions 4 or 5.

For chopping of hay or straw bales without silage bales positions 2 or 3 usually work best.



For mixing of concentrates the counter knives should be retracted fully.

Because of the unique design of the Hi-Spec auger the following conditions obtain the best results when using the Vertical Feeder.



- All of the material in the Vertical Feeder should be moving.
- If the material is stopping or the tractor is coming under pressure the counter knives are in too far and should be withdrawn.
- If the material is moving at the same speed as the auger then the counter knives should be let in one position.

Hydraulic Counter Knives

Counter Knife Fully Out

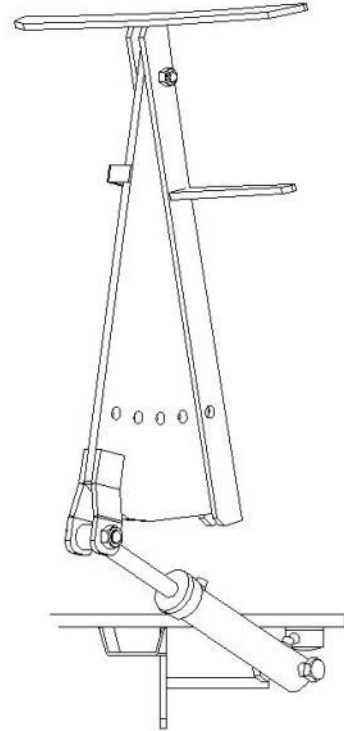
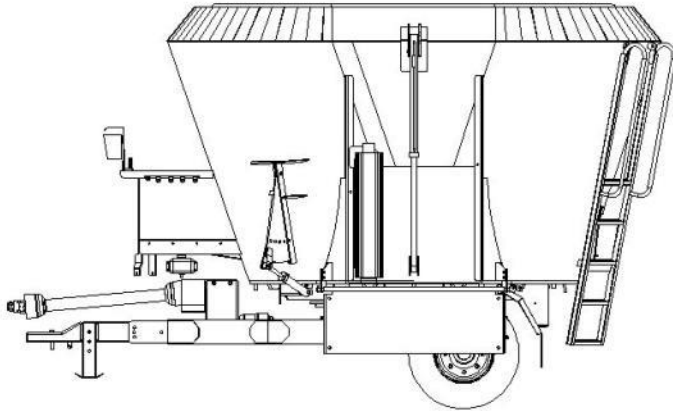


Counter Knife Fully In

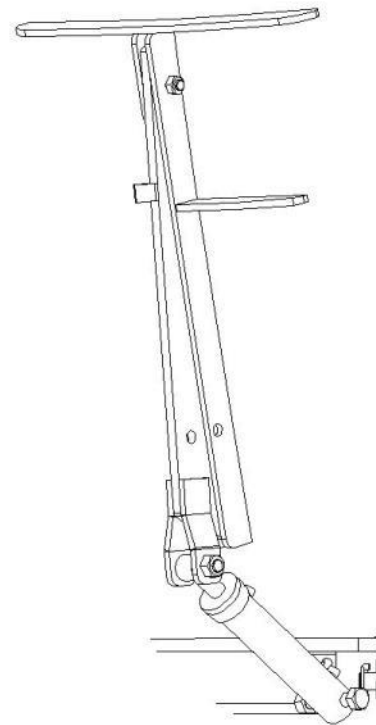
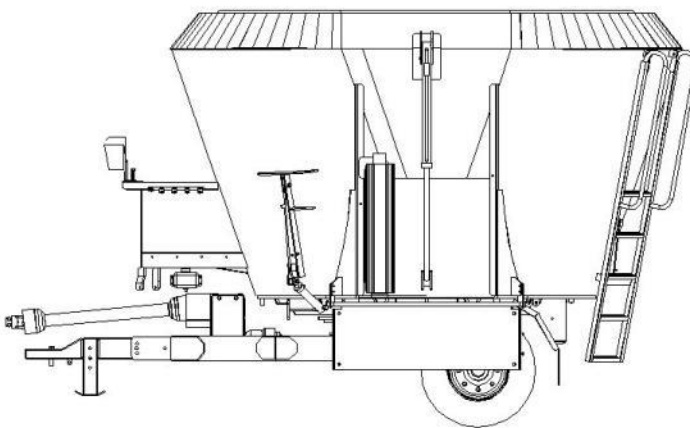


Manual Counter Knives

Counter Knife Fully Out

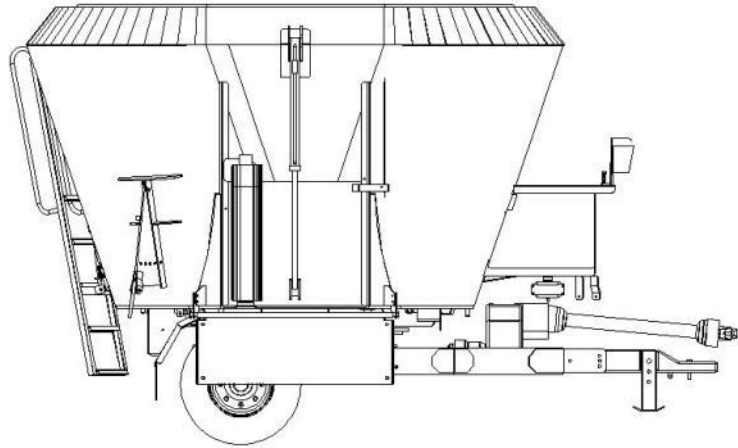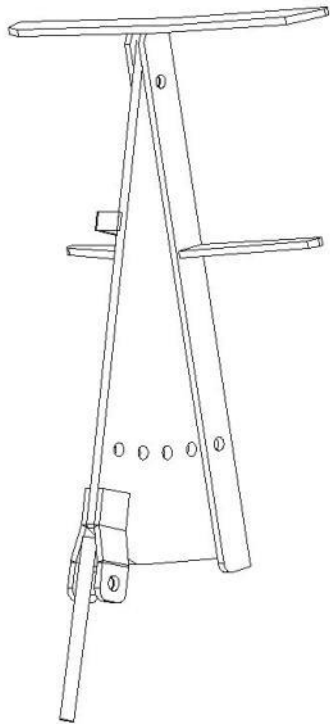

Counter Knife Fully In

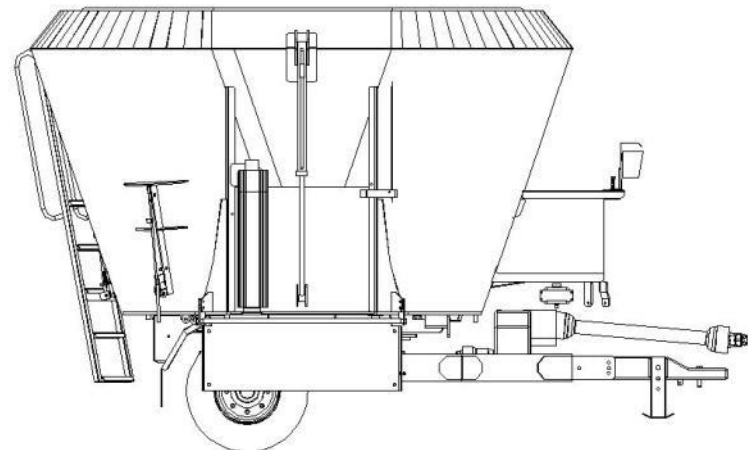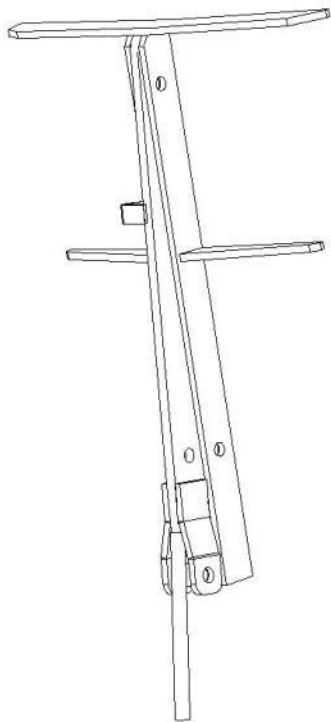

Loading Instructions

With the Vertical Feeder running load the ingredients in the following order.

- Straw
 - Hay
 - Bale silage
 - Pit silage
 - Maze
 - Concentrates
 - Minerals
-
- In order to obtain maximum chopping and mixing it is recommended to fill the machine to at least 50% of its volume capacity.
 - When the loading of ingredients is finished inspect the load for quality of chopping and or mixing before discharging the feed mix.
 - When loading is finished and you are satisfied with the quality of the chopping and mixing disengage the PTO and proceed to the feeding area.
 - Make sure all packaging, i.e. bale wrap, twine and netting are completely removed before loading your machine
 - Standing level with or above the machine in order to load manually is not permitted. There is a risk of falling into the mixing chamber which could result in a fatal injury. Loading should only be carried out with suitable equipment ie. loader/teleporter.
 - When loading the machine, make sure the loader/teleporter is clear of all power lines
 - Ensure that there are no persons standing in the vicinity of the machine when loading



Feedout Instructions

Vertical Feeder Equipped with One Door with Teaser and Manually Adjusted Chute Height.

1. Position the tractor and Vertical Feeder at the start of the feedout area in a straight line an appropriate distance away from stock, Fig. 6
2. The required height of the chute should have been set. See "General Instructions" for more details.
3. Using tractor spool-valve 1 open the feedout door to the desired height. The chute should also rise to the pre set height, see Fig 9. For most applications we recommend opening the feedout door to the maximum height to obtain an even feedout.
4. Set up the tractor in the desired forward gear to advance for discharge.
5. Engage the PTO and increase its speed to 540 rpm.
6. The rate of feedout is controlled by the ground speed of the tractor and where applicable the opening height of the feedout door.
7. When the load has been discharged, close the feedout doors and return the chute to its lower transport position, see Fig. 6.

In summary the sequence is as follows: -

- Select feedout side.
- Open feedout door.
- Set tractor gear.
- Engage PTO.

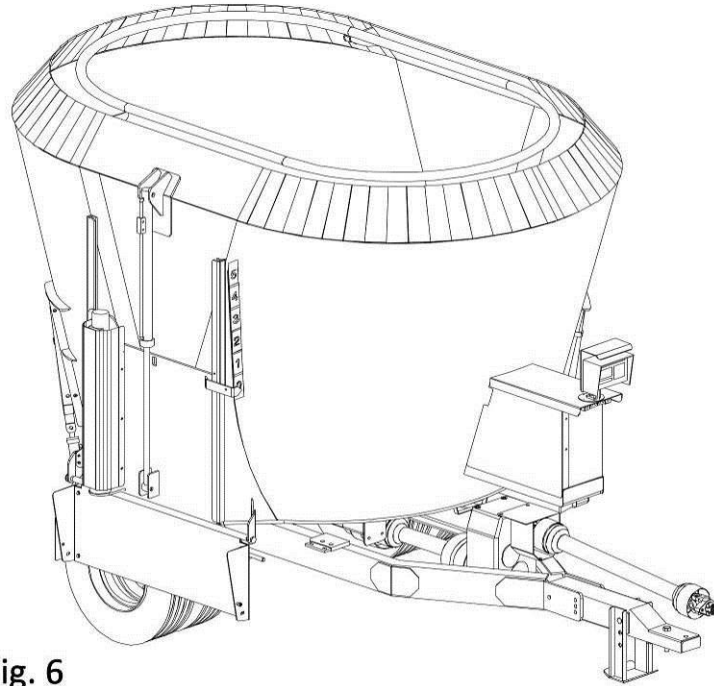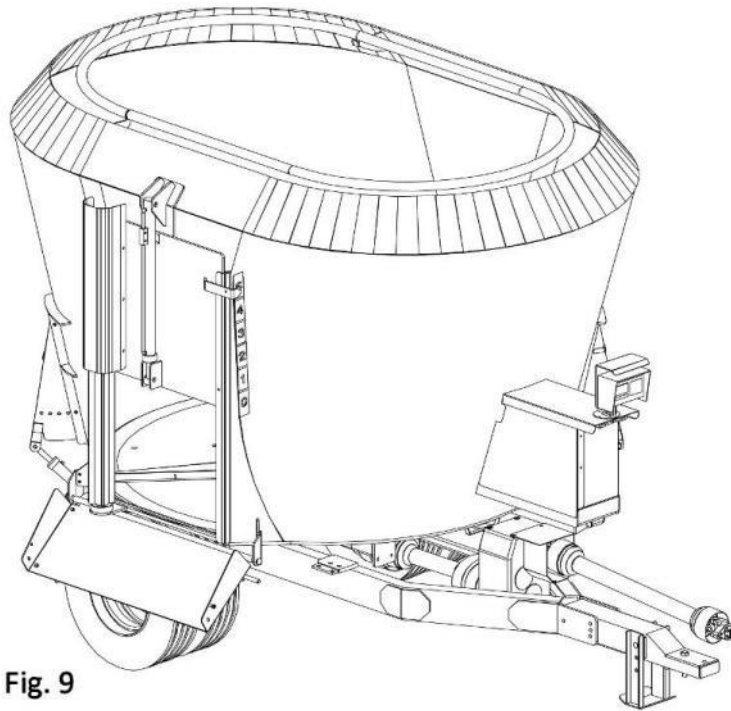**Fig. 6****Fig. 9**

Vertical Feeder Equipped with Two Feedout Doors with Teasers and Manually Adjusted Chute Height.

1. Position the tractor and Vertical Feeder at the start of the feedout area in a straight line an appropriate distance away from stock, Fig. 6
2. The required height of the chute should have been set. See "General Instructions" for more details.
3. Using the Handset open the required feedout door to the desired height. The chute should also rise to the pre set height, see Fig 9. For most applications we recommend opening the feedout door to the maximum height to obtain an even feedout.
4. To feedout from a second feedout door use tractor spool-valve 2 and open the second feedout door to the desired height.
5. Set up the tractor in the desired forward gear to advance for discharge.
6. Engage the PTO and increase its speed to 540 rpm.
7. The rate of feedout is controlled by the ground speed of the tractor and where applicable the opening height of the feedout door.
8. When the load has been discharged, close the feedout doors and return the chutes to their lower transport positions, see Fig. 6.

In summary the sequence is as follows: -

- Select feedout side.
- Open feedout door.
- Select second feedout side.
- Open feedout door.
- Set tractor gear.
- Engage PTO.

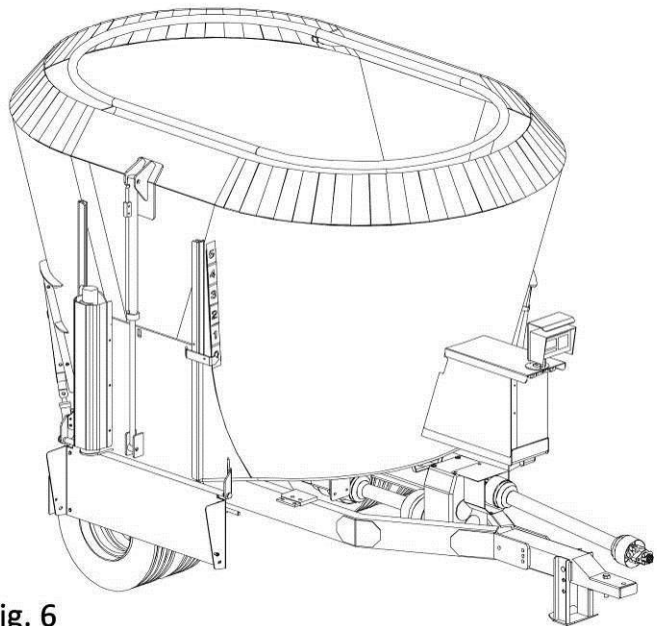
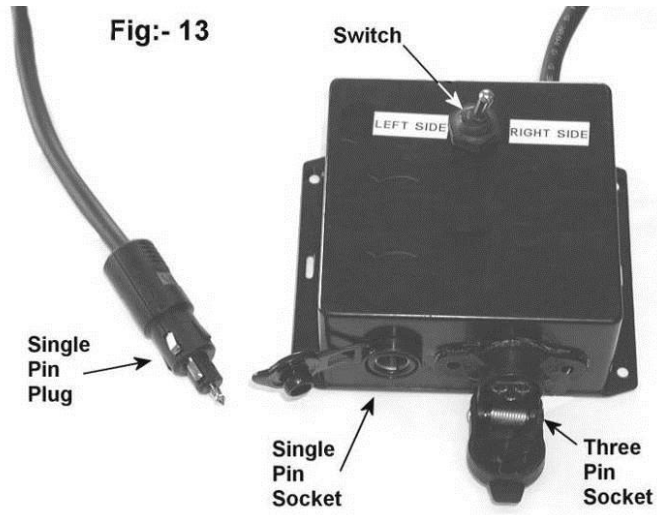


Fig. 6

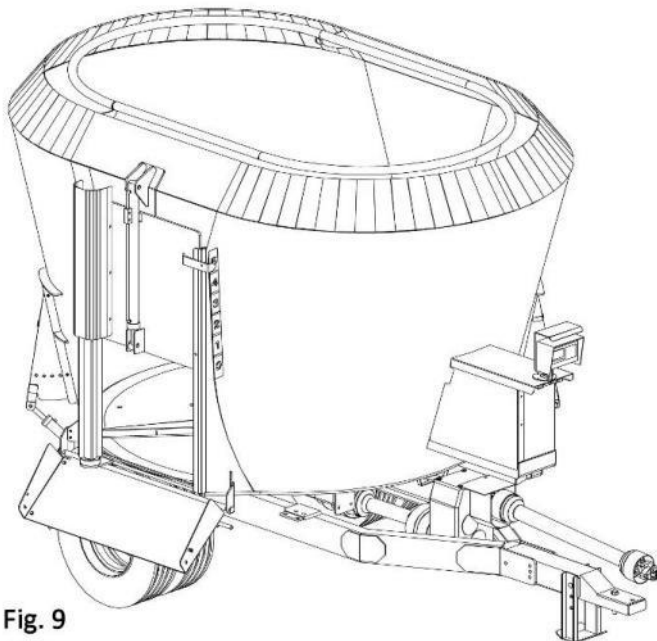







Fig. 9

Vertical Feeder Equipped with One Feedout Door with Teaser and Hydraulic Chute.

1. Position the tractor and Vertical Feeder at the start of the feedout area in a straight line an appropriate distance away from stock, Fig. 6.
2. If your Vertical Feeder is equipped with only one feedout door and hydraulic chute there will be a control box fitted. Use switch to change operation between Door and Chute.
3. Using tractor spool-valve 1, adjust the chute to the desired height, see Fig. 7.
4. Using tractor spool valve 2, open the feedout door to the desired height. The counter knives will retract fully first, Fig. 8. When the feed mix has a high percentage of forage we recommend opening the feedout door to the maximum height to obtain an even feedout, see Fig. 9. When the feed mix has a high percentage of concentrates then opening the door about half way should be adequate.
5. Set up the tractor in the desired forward gear to advance for discharge.
6. Engage the PTO and increase its speed to 540 rpm.
7. The rate of feedout is controlled by the ground speed of the tractor and where applicable the opening height of the feedout door.
8. When the load has been discharged, close the feedout door and return the chute to its lower transport positions, see Fig. 6.
9. On tractors with a two speed PTO the 1,000 RPM PTO speed can be used to empty the Vertical Feeder when there is 1,000 kg of feed remaining in the Vertical Feeder. This will speed up the emptying procedure.

In summary the sequence is as follows: -

- Select feedout side.
- Adjust chute height.
- Open feedout door.
- Select second feedout side.
- Adjust chute height.
- Open feedout door.
- Set tractor gear.
- Engage PTO.

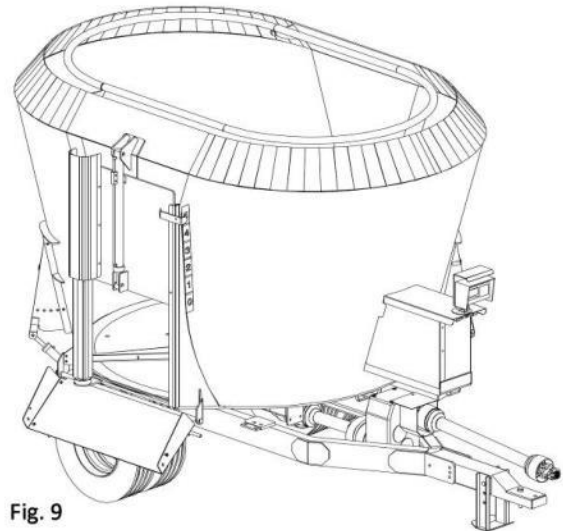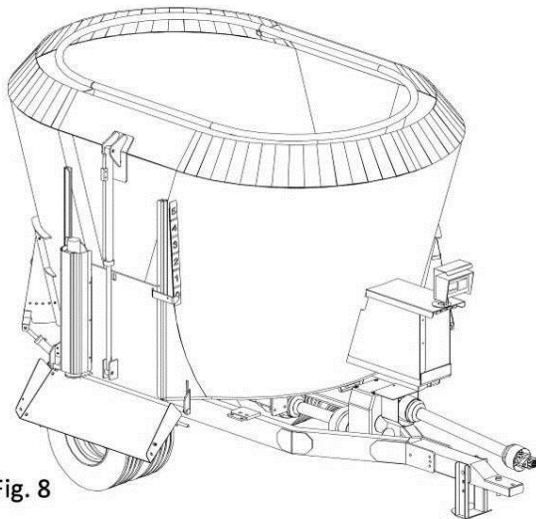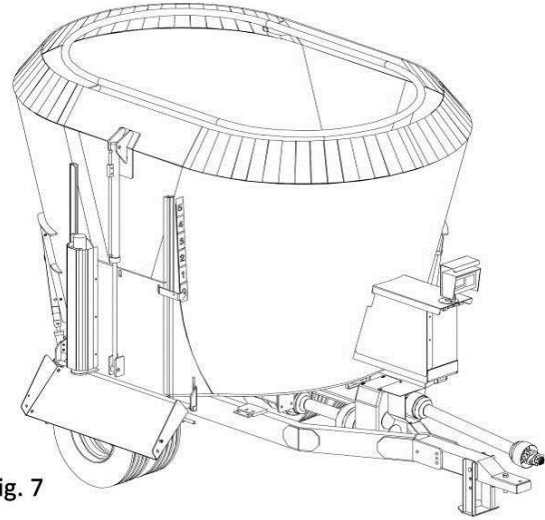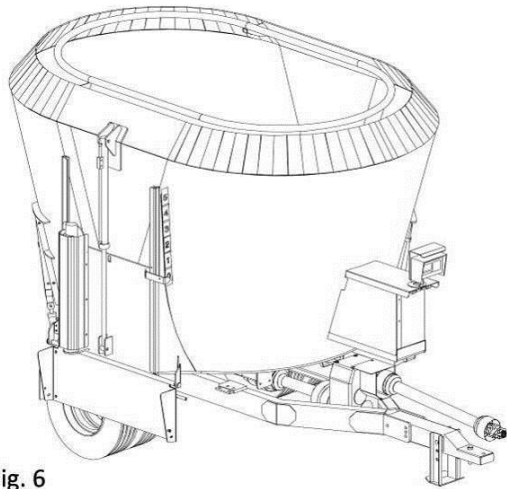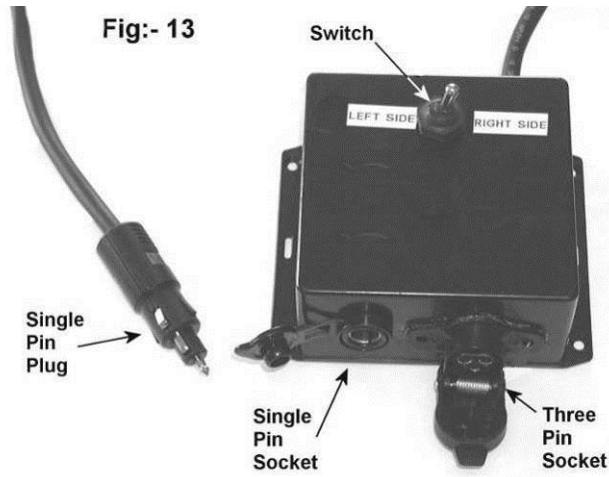

Vertical Feeder Equipped with Two Feedout Doors with Teasers and Hydraulic Chutes.

1. Position the tractor and Vertical Feeder at the start of the feedout area in a straight line an appropriate distance away from stock, Fig. 6.
2. Using the Dinacom2 Hand Control Unit, Fig. 20, (*For Details of Button Functions on Dinacom2 Hand Control Unit see page 44*), select the side from which you wish to feedout the mix from.
3. Using Dinacom2 Hand Control Unit, Fig. 20, adjust the chute to the desired height, see Fig. 7.
4. Using Dinacom2 Hand Control Unit, Fig. 20, open the feedout door to the desired height. The counter knives will retract fully first, Fig. 8. When the feed mix has a high percentage of forage we recommend opening the feedout door to the maximum height to obtain an even feedout, see Fig. 9. When the feed mix has a high percentage of concentrates then opening the door about half way should be adequate.
5. Set up the tractor in the desired forward gear to advance for discharge.
6. Engage the PTO and increase its speed to 540 rpm.
7. The rate of feedout is controlled by the ground speed of the tractor and where applicable the opening height of the feedout door.
8. When the load has been discharged, close the feedout doors and return the chutes to their lower transport positions, see Fig. 6.
9. On tractors with a two speed PTO the 1,000 RPM PTO speed can be used to empty the Vertical Feeder when there is 1,000 kgs of feed remaining in the Vertical Feeder. This will speed up the emptying procedure.

In summary the sequence is as follows: -

- Select feedout side.
- Adjust chute height.
- Open feedout door.
- Select second feedout side.
- Adjust chute height.
- Open feedout door.
- Set tractor gear.
- Engage PTO.



Fig. 20

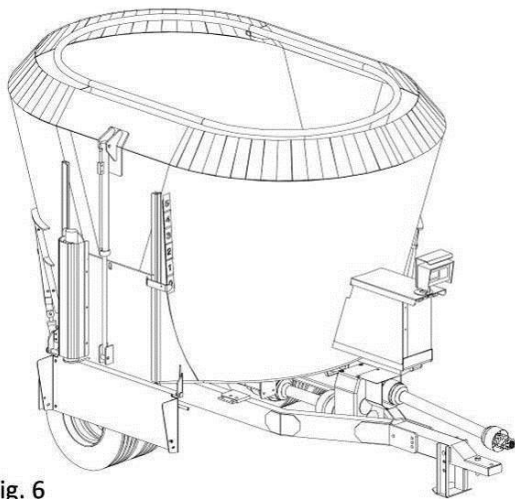


Fig. 6

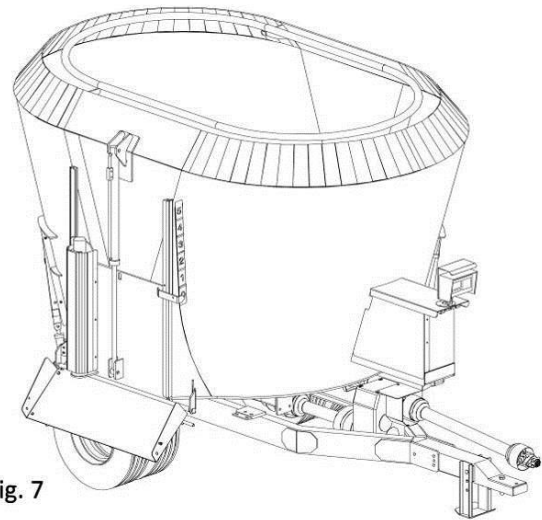


Fig. 7

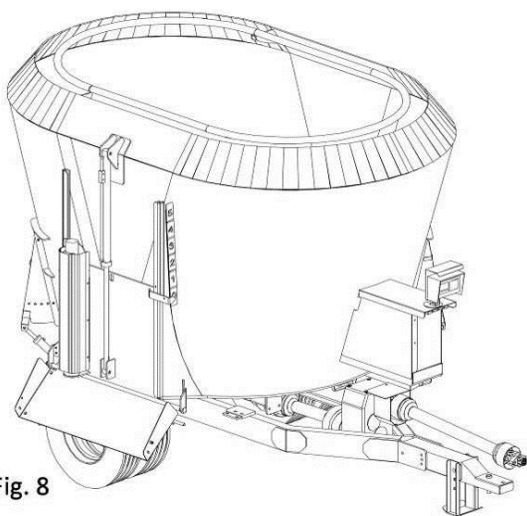


Fig. 8

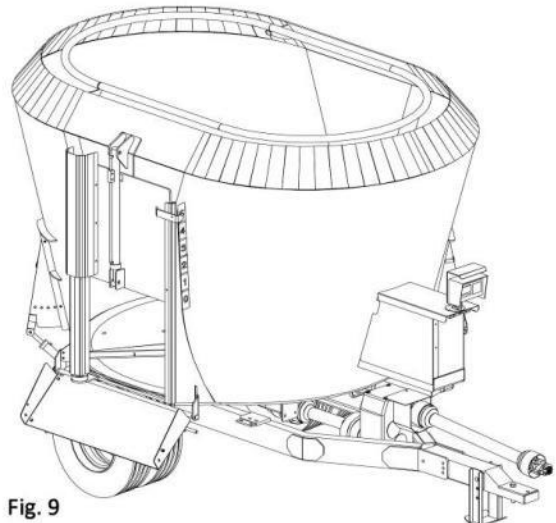


Fig. 9

Vertical Feeder equipped with Cross Conveyor

1. Position the tractor and Vertical Feeder at the start of the feedout area in a straight line an appropriate distance away from stock.
2. Using the Dinacom2 Hand Control Unit, Fig. 20, (*For Details of Button Functions on Dinacom2 Hand Control Unit see page 44*), select the side from which you wish to feedout the mix from (fig. 34).
3. Using Dinacom2 Hand Control Unit, adjust the conveyor to the required position and set the conveyor to the required speed.
4. Using the Dinacom2 Hand Control Unit open the feedout door to the desired height (fig. 35). When the feed mix has a high percentage of forage we recommend opening the feedout door to the maximum height to obtain an even feedout, see Fig. 9. When the feed mix has a high percentage of concentrates then opening the door about half way should be adequate.
5. Set up the tractor in the desired forward gear to advance for discharge.
6. Engage the PTO and increase its speed to 540 rpm.
7. The rate of feedout is controlled by the ground speed of the tractor and where applicable the opening height of the feedout door.
8. When the load has been discharged, close the feedout door.
9. On tractors with a two speed PTO the 1000 RPM PTO speed can be used to empty the Vertical Feeder when there is 1000 kgs of feed remaining in the Vertical Feeder. This will speed up the emptying procedure.

In summary the sequence is as follows: -

- Select feedout side.
- Adjust conveyor.
- Set conveyor speed
- Open feedout door.
- Set tractor gear.
- Engage PTO.



Fig. 20

Fig. 34



Fig. 35



Vertical Feeder equipped with Cross Conveyor and Elevator

1. Position the tractor and Vertical Feeder at the start of the feedout area in a straight line an appropriate distance away from stock.
2. Using the Dinacom2 Hand Control Unit, Fig. 20, (*For Details of Button Functions on Dinacom2 Hand Control Unit see page 44*), select the side from which you wish to feedout the mix from (fig. 30). (If choosing to feed out from side without elevator, leave elevator in the upright position and turn off)
3. Using Dinacom2 Hand Control Unit, adjust the conveyor to the required position and set the conveyor to the required speed.
4. Set elevator to required height (fig. 32).
5. Using Dinacom2 Hand Control Unit, open the feedout door to the desired height (fig. 33). When the feed mix has a high percentage of forage we recommend opening the feedout door to the maximum height to obtain an even feedout, see Fig. 9. When the feed mix has a high percentage of concentrates then opening the door about half way should be adequate.
6. Set up the tractor in the desired forward gear to advance for discharge.
7. Engage the PTO and increase its speed to 540 rpm.
8. The rate of feedout is controlled by the ground speed of the tractor and where applicable the opening height of the feedout door.
9. When the load has been discharged, close the feedout door.
10. On tractors with a two speed PTO the 1000 RPM PTO speed can be used to empty the Vertical Feeder when there is 1000 kgs of feed remaining in the Vertical Feeder. This will speed up the emptying procedure.

In summary the sequence is as follows: -

- Select feedout side.
- Adjust conveyor.
- Set conveyor speed.
- Adjust elevator.
- Open feedout door.
- Set tractor gear.
- Engage PTO.



Fig. 20



Fig. 30



Fig. 31



Fig. 32




Fig. 33

Vertical Feeder equipped with VHD Cross Conveyor

1. Position the tractor and Vertical Feeder at the start of the feedout area in a straight line an appropriate distance away from stock.
2. Using the Dinacom2 Hand Control Unit, Fig. 20, (*For Details of Button Functions on Dinacom2 Hand Control Unit see page 44*), select the side from which you wish to feedout the mix from.



Press the  button for the direction and position required (fig. 51).

3. Engage the tractor spool to ensure a soft start for the belt

Note: Do not engage the tractor spool before pressing on the electrical controller button. This will cause the belt to start too quickly and the drive sprockets to slip.

4. When feeding out, the speed of the belt should be fast enough to prevent any build up of meal at the door. The belt speed is set by adjusting the flow control knob on the side of the hydraulic box (fig. 52).
5. Using Dinacom2 Hand Control Unit, open the feedout door to the desired height. When the feed mix has a high percentage of forage we recommend opening the feedout door to the maximum height to obtain an even feedout. When the feed mix has a high percentage of concentrates then opening the door about half way should be adequate.
6. Set up the tractor in the desired forward gear to advance for discharge.
7. Engage the PTO and increase its speed to 540 rpm.
8. The rate of feedout is controlled by the ground speed of the tractor and where applicable the opening height of the feedout door.
9. When the load has been discharged, close the feedout door.
10. On tractors with a two speed PTO the 1000 RPM PTO speed can be used to empty the Vertical Feeder when there is 1000 kgs of feed remaining in the Vertical Feeder. This will speed up the emptying procedure.

In summary the sequence is as follows: -

- Select feedout side.
- Adjust conveyor.
- Engage Tractor Spool.
- Set conveyor speed.
- Open feedout door.
- Set tractor gear.
- Engage PTO.



Fig. 20



Conveyor care

- To prevent problems with the belt drive and sprocket wear, the belt must be washed thoroughly once a month to reduce build-up of meal. This can be done by raising the conveyor on one side and hosing the belt as it turns.
- Grease the conveyor slide regularly.
- It is normal for the belt to sag; the belt must never be tensioned to remove all sag.
- The centre pivot points and the lifting arms use igus bearings and do not require grease.

Vertical Feeder equipped with Straw Blower

1. Position the tractor and Vertical Feeder at the start of the feedout area in a straight line an appropriate distance away from stock.
2. Using the Dinacom2 Hand Control Unit, Fig. 20, (*For Details of Button Functions on Dinacom2 Hand Control Unit see page 44*), extend the chute flap up/down (fig. 41).
3. Adjust the angle of the blower chute left/right to the required position (fig. 42).
4. Once the required chopping length has been achieved.
5. Using Dinacom2 Hand Control Unit, open the feedout door to the desired height. When the mix has a high percentage of forage we recommend opening the feedout door to the maximum height to obtain an even feedout.
6. Set up the tractor in the desired forward gear to advance for discharge.
7. Engage the PTO and increase its speed to 540 rpm.
8. The rate of feedout is controlled by the ground speed of the tractor and where applicable the opening height of the feedout door.
9. When the load has been discharged, close the feedout door and return the chutes to their lower transport positions
10. On tractors with a two speed PTO the 1000 RPM PTO speed can be used to empty the Vertical Feeder when there is 600 kgs of straw remaining in the Vertical Feeder. This will speed up the emptying procedure.

In summary the sequence is as follows: -

- Adjust position of chute flap.
- Adjust angle of chute.
- Open feedout door.
- Set tractor gear.
- Engage PTO.



Fig. 20

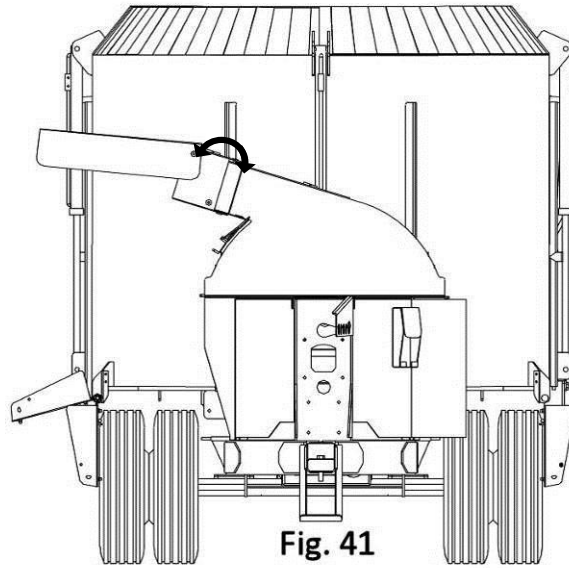


Fig. 41








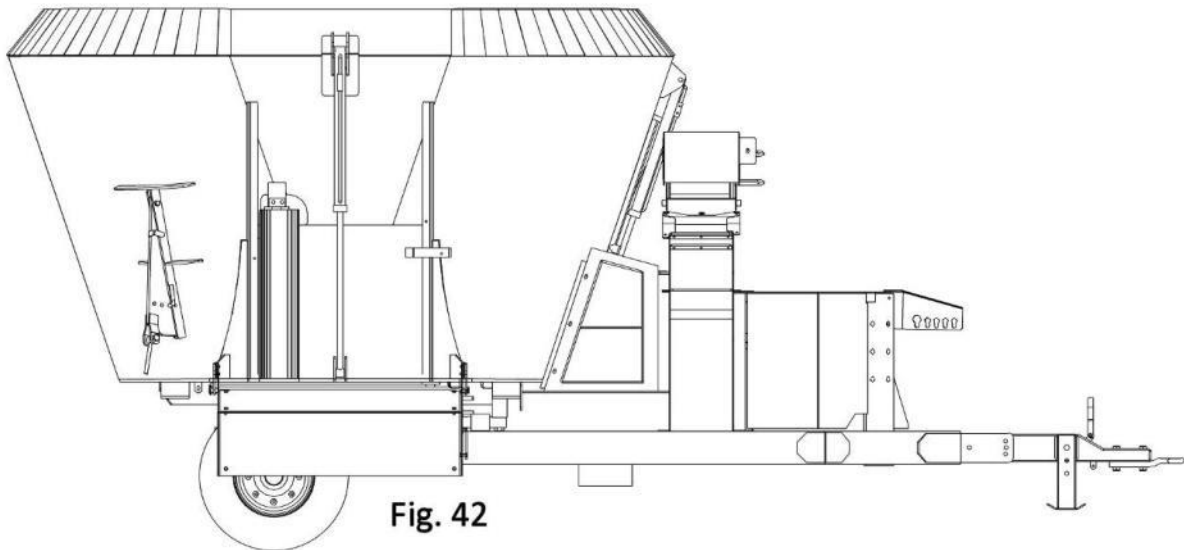


Fig. 42

Vertical Feeder Equipped with One Feedout Door with Teaser and Elevator

1. Before entering the feedout area set the switch on the control box to Elevator transport to work position, ELEV. UP/SLIDE, see Fig. 12.
2. If your Vertical Feeder is equipped with only one feedout door and elevator there will be a control box fitted. Use switch to change function between Door and Elevator.
3. Using tractor spool-valve 1 to move the elevator from the transport position to the work position, see Fig. 1 and Fig. 2 on page 43.
4. Position the tractor and Vertical Feeder at the start of the feedout area in a straight line an appropriate distance away from stock.
5. Using tractor spool-valve 1 again to set the elevator at the required height, see Fig. 3.
6. Using tractor spool-valve 2 open the feedout door to the desired height. If the Vertical Feeder is equipped with hydraulic operated counter knives then the counter knives will retract fully first, see Fig. 4. Then the feedout door opens, see Fig. 5.
7. Set the switch on the control box to elevator feedout position to operate the elevator motor, ELEV. FEEDOUT, see Fig. 12. This will set tractor spool-valve 1 to drive the elevator chains for feedout.
8. Set up the tractor in the desired forward gear to advance forward for discharge.
9. Using tractor spool-valve 1 drive the elevator in the correct direction. The speed of the elevator can be adjusted from the side of the feeder using the flow control valve, see Fig.17.
10. Engage the PTO and increase its speed to 540 rpm.
11. The rate of feedout is controlled by the forward speed of the tractor, the speed of the elevator and where applicable the opening height of the feedout door.
12. When the load has been discharged, close the feedout doors and return the elevator to the transport position, Fig. 1.

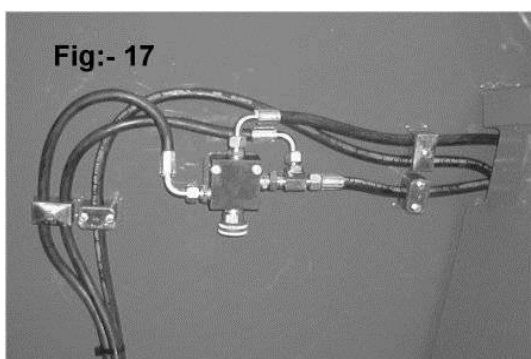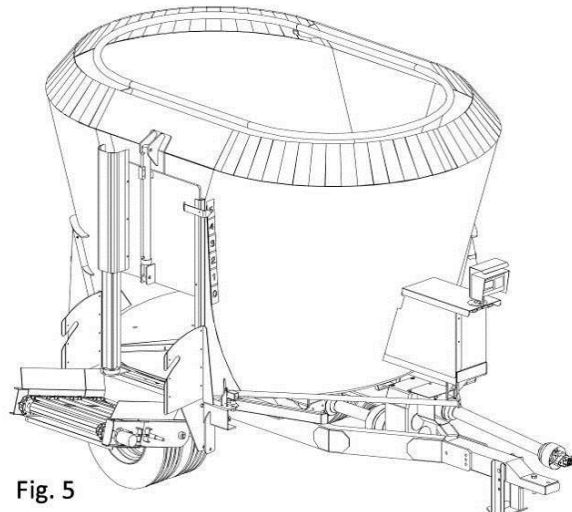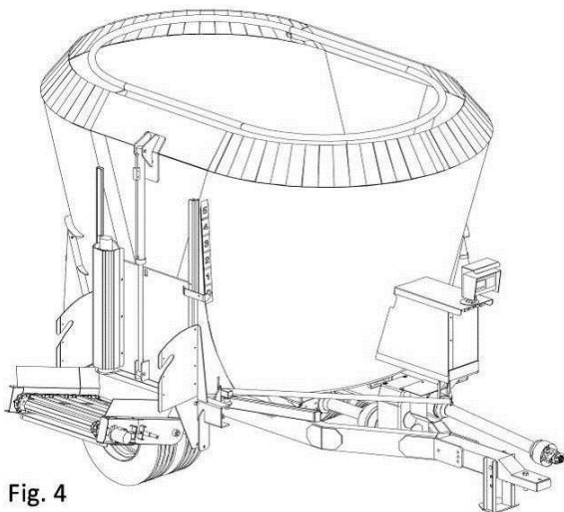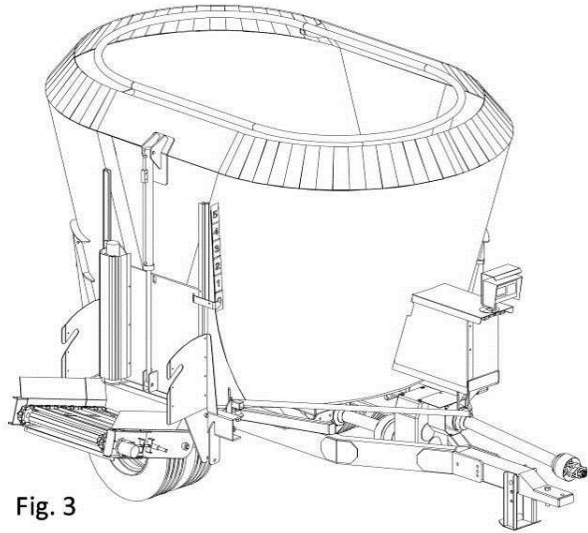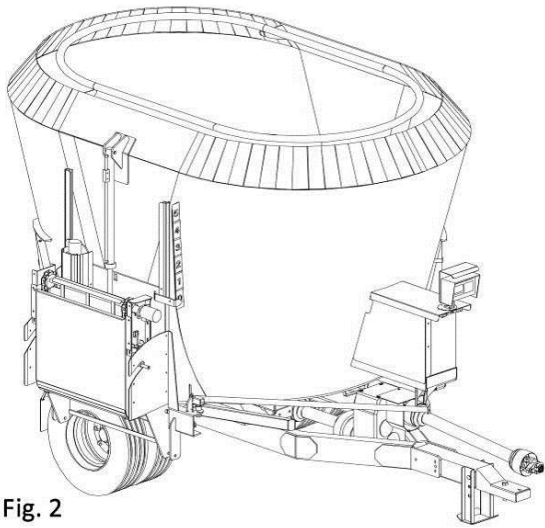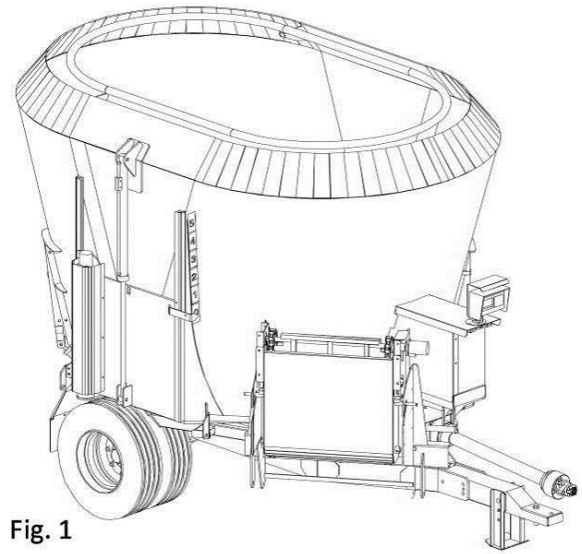

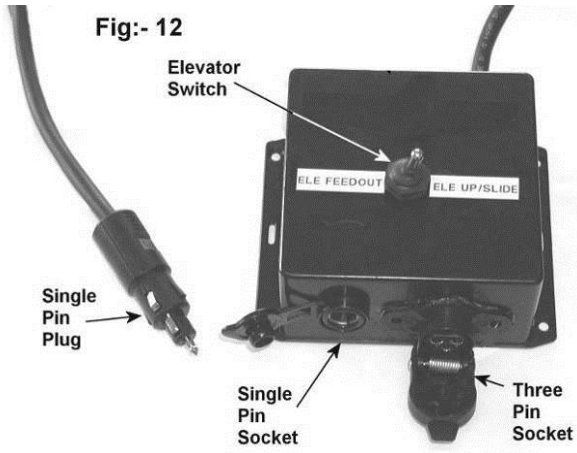

In summary the sequence is as follows: -

- Set elevator to work position.
- Set elevator height.
- Open feedout door.
- Set control box to elevator feedout.
- Set tractor gear.
- Start elevator.
- Engage PTO.
- Proceed forward feeding out.
- Disengage PTO.
- Close feedout door.
- Stop elevator
- Return elevator to transport position.



Take care as you move the elevator from work to transport position and vice versa as it can cause injury to onlookers.


Vertical Feeder Equipped with Two Feedout Doors with Teasers, One Elevator and One Chute

- ④ Using the Dinacom2 Hand Control Unit, Fig. 20, select the side from which you wish to feedout the mix from, i.e. elevator side or chute side, LEFT SIDE or RIGHT SIDE. As standard the elevator will be fitted on the right side and the chute on the left side.
- ④ To feedout using the elevator refer to elevator instructions.
- ④ To feedout using the chute refer to chute instructions.



Fig. 20

DINACOM 2 Hand Control Unit

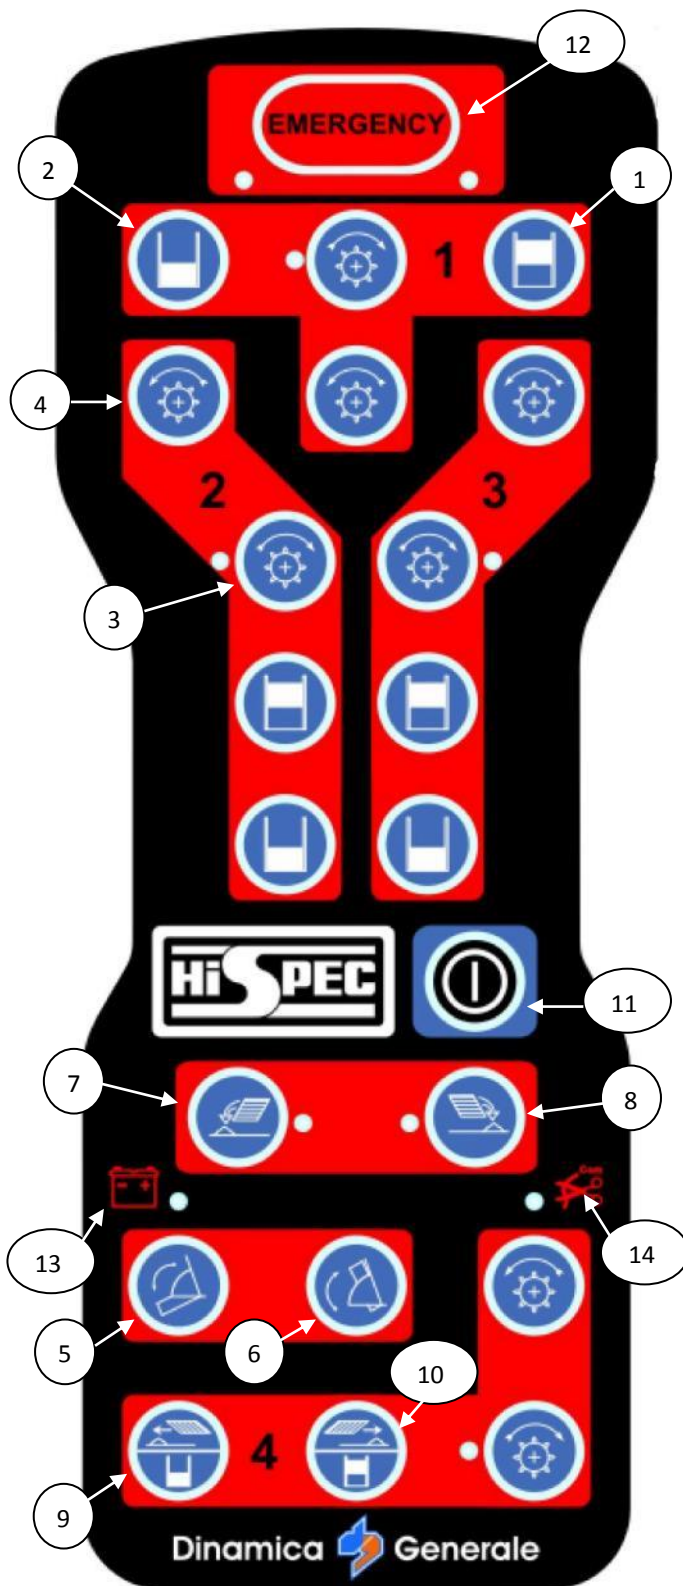

Button Functions	
1-	DOOR OPEN
2-	DOOR CLOSE
3-	DISCHARGE ROLLER FOR FEED OUT
4-	DISCHARGE ROLLER REVERSE
5-	ELEVATOR DOWN
6-	ELEVATOR UP
7-	CONVEYOR FEED
8-	REVERSE CONVEYOR FEED
9-	CONVEYOR LEFT OR DOOR CLOSE
10-	CONVEYOR RIGHT OR DOOR OPEN
11-	POWER
12-	EMERGENCY BUTTON
13-	BATTERY INDICATOR
14-	COMMUNICATION ERROR INDICATOR

**** Please note: Button Groups are for individual doors, depending on number of doors fitted. See table for more details.**

For feeders fitted with a single door

Left door	Group 2
Right door	Group 3

For Feeders fitted with multiple doors

Front Left door	Group 2
Front Right door	Group 3
Back Right door	Group 4
Back Left door	Group 1

For feeders fitted with a cross conveyor, its functions will be controlled by button group 4

Warning Lights

Emergency Function



In case of problem or emergency press the  button.

When you press the emergency button ALL MOVEMENTS ARE STOPPED IMMEDIATELY.

When the emergency button is pressed, the red indicators are ON.

To restart the system it is necessary to disconnect the power supply cable for a number of seconds and reconnect it.

Alarms

COMMUNICATION ERROR



RED Light

Is turned on when there are problems on the communication between the DinaCom2 Hand Control Unit and EV Driver Unit. (Example – damaged cable)

BATTERY VOLTAGE



GREEN Light

Is turned ON when the system is turned ON and the voltage of the battery is no more than 9Vdc.


When the LED is OFF, the battery voltage is under 9Vdc and it is necessary to change or recharge it.

Troubleshooting for DINACOM2 Hand Control Unit

If the DlnaCom2 Hand Control Unit is unresponsive and Emergency Lights are On.

(For position of EV Driver unit see page 51)

1. CHECK THE FUSE.

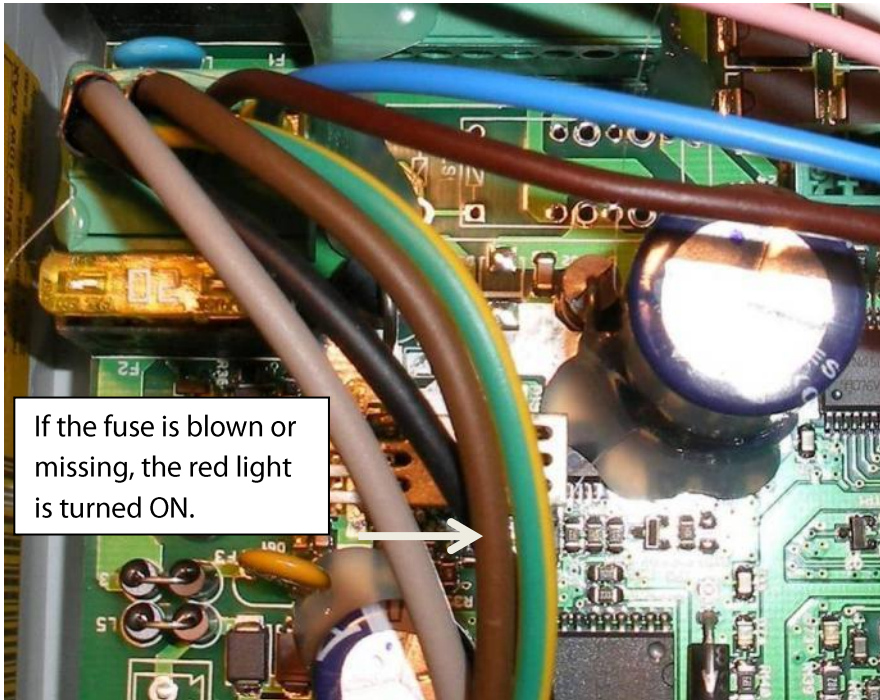

If the fuse is ok and you have a Communication Error Light



2. CHECK THE CABLE CONNECTION IN THE CONTROL UNIT




If a Function is not Working Properly by Pressing a Button.


1. CHECK THE LIGHT ON THE OUTPUT CABLE.




2. CHECK THE LIGHT ON THE EV DRIVER BOARD.

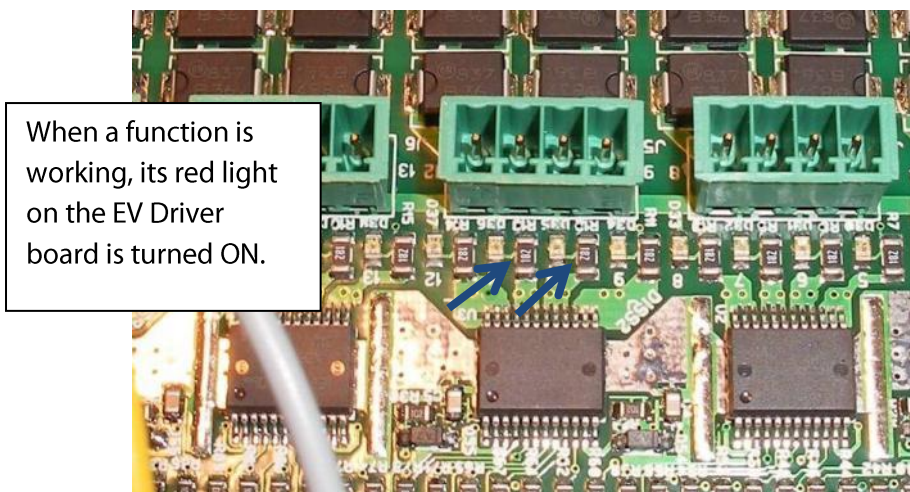


3. CHECK THE POWER SUPPLY ON THE EV BOARD.

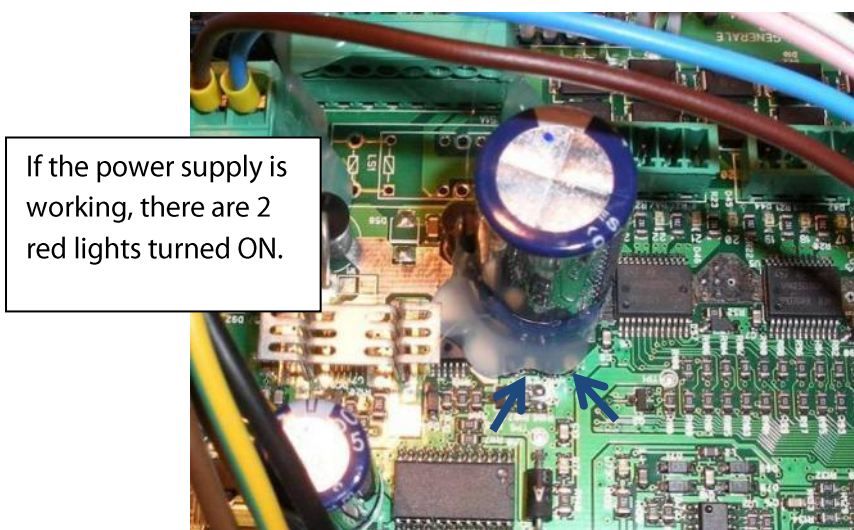


4. CHECK THE FUSE.

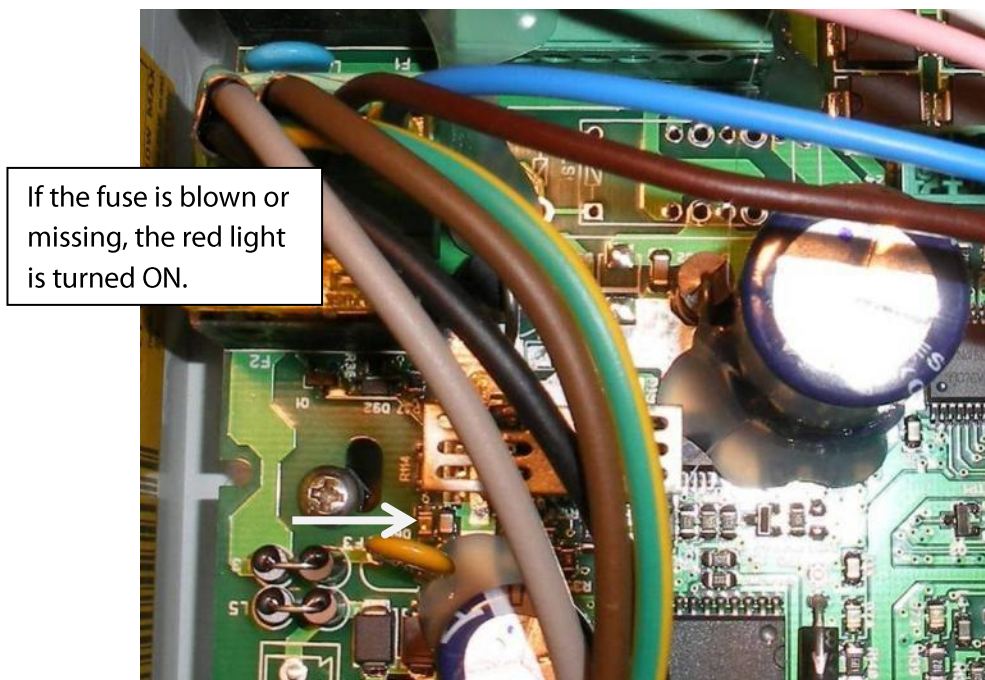


CHECK THE EMERGENCY CONDITION.

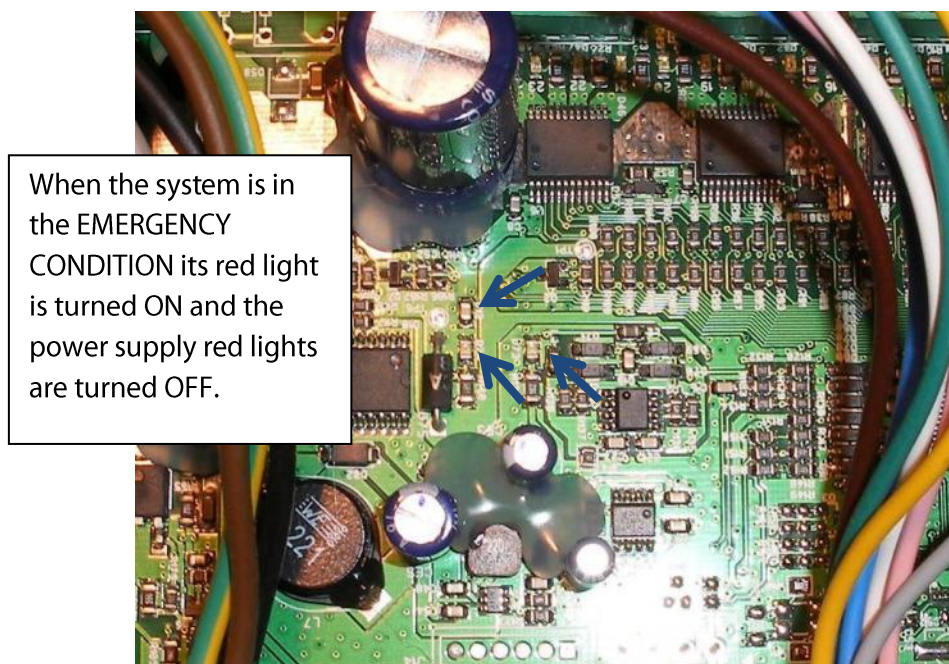

Dinacom2 Hand Control Unit Basic Layout

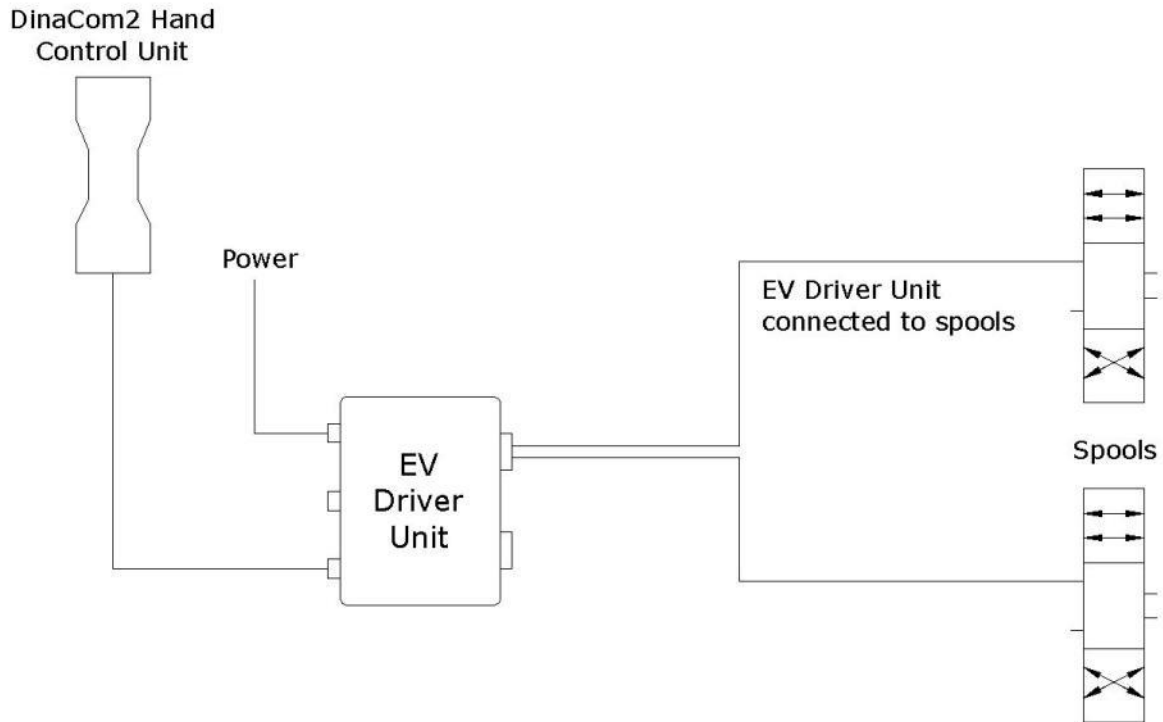

Position of EV Driver Unit

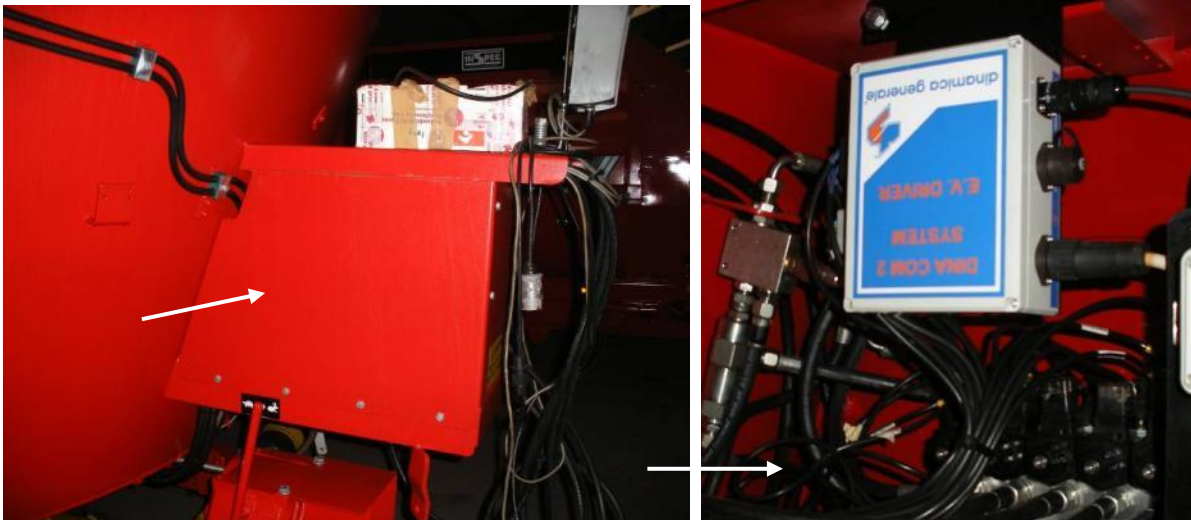

Maintenance

In order to maintain your Vertical Feeder in peak working order it is necessary to carry out routine maintenance. The following will give you details of the procedures and frequency required.

Correct Maintenance and Inspection Procedures

- Learn how to service your machine correctly.
- Follow the correct maintenance and inspection procedures shown in this manual.
- Inspect the machine daily before starting.
- Walk around the machine checking general appearance.
- Check for loose or missing parts.
- Always disengage the PTO and stop the tractor engine and remove the key before greasing and making any adjustments.
- Never operate the machine without safety guards in position.

Caution

During operation, some parts of the hydraulic system can become hot; allow the machine to cool down before beginning inspection or maintenance procedures.

If there is a problem with your machine, repair it before operating or contact your authorised dealer or Hi-Spec Engineering.

Maintenance Safety

Extreme caution must be taken when performing maintenance or repairs to the Hi-Spec Vertical diet feeder. The machine must be disconnected from all power sources (ie. tractor) before any maintenance or repair work is carried out.

It is the responsibility of the operator to ensure that a safe system of work is in place before any maintenance or repair procedures.

It is recommended that only trained qualified personnel enter the mixing chamber

The mixing chamber is a particular hazard. It contains a large number of knives for cutting fibres in the diet mix. The cutting knives are bolted to the mixing auger and are positioned horizontally. The floor of the mixing chamber is extremely slippery. Before performing any work within the mixing chamber the operator must cover the cutting surface of all knives and ensure they have a good base to provide a solid footing.

The mixing chamber should only be entered and exited through a feeding door. The door should be opened and secured using a 12mm bolt or pin through the hole provided in the door slide. Never rely on the machine hydraulics to hold a door open.

Recommended Maintenance

The following is a maintenance list recommended for your machine by Hi-Spec Engineering to ensure your Feeder is kept in peak condition.

After the First Use and then after 25 hours:

- Check all nuts for tightness.
- Remove auger hatch cover and check main gearbox bolts for tightness.
- Check tyre pressure.
- Check tightness of road wheel nuts.

Recommended tyre pressures are as follows.

<u>Wheel size</u>	<u>Pressure</u>
40x14.5-19	5.0 Bar
30x11.5-14.5x	6.0 Bar
235/75 R17.5 twin	7.0 Bar
385/55 R19.5	5.5 Bar

Every 50 hours:

- Check oil reservoir container for gearbox.
- Grease door slides.
- Check Auger Knives.

Every 100 hours:

- Grease points...
- Grease points on hydraulic elevator.
- Grease points on hydraulic elevator ram.
- Grease points on the hydraulic door ram.
- Grease points on PTO shaft, also pull apart and grease sliding tube.
- Check tyre pressures and road wheel nuts.
- Check tightness of gearbox mounting nuts and auger mounting nuts.
- Check elevator chains for slackness and adjust if necessary.

Yearly maintenance:

- Check the hydraulic pipes for any frays or fractures and replace if necessary.
- Check the wheel bearings for any slackness and adjust if required.
- Remove the hubcap and fill with grease.
- Ensure the weighbar bolts are tightened to the proper torque.

M24 x 130 Bolts	400 Nm
M30 x 200 Bolts	40 Nm

Note: -

The large bolt (M30) should never be over tightened as this will cause the weighing system to read inaccurately.

Wheel removal/refitting

Due to the size and weight of trailing agricultural machines special precautions must be adhered to when removing or replacing a tyre and wheel assembly.

Due to the risks involved, wheel removal MUST only be carried out by skilled trained personnel (i.e. professional tyre fitter).

It is advised that before any work is carried out;

- If the machine is a hazard on a public road that suitable warning is provided to other road users;
- The machine is emptied and moved to a level area with good solid ground;
- The machine wheels are chocked and it is hitched to a tractor with its parking brake effectively engaged;
- A jacking / lifting / supporting position is chosen to maintain maximum machine stability;
- The load at the jacking / lifting point is known;
- The jacking / lifting equipment has sufficient lift capacity and is adequately maintained for the task;
- Ground conditions at the jacking point can withstand the loading;
- The hydraulics of any Forklift Truck / Telescopic Handler / etc, deployed are not solely relied upon while working in the danger zone;
- An adequately rated axle stand or other prop is positioned following the same safety procedure as for choosing the jacking point;
- There is no possibility of slippage between the safety prop (axle stand or other adequate strength support) and the machine;
- As far as possible those involved in the task stay clear of the danger zone (crush area if the machine were to collapse off its temporary support);
- Where possible, mechanical aids are used to lift / position wheels;
- High visibility clothing is worn where appropriate and where possible the work is carried out away from live traffic;
- Please consult your local Hi-Spec dealer or contact Hi-Spec Engineering Ltd directly if there are any queries.

Jacking Points

- Jacking points are provided at the rear of the machine as indicated by this symbol.



- Machine must be empty before jacking



-
- Jacking and wheel removal must only be carried out by skilled trained personnel (i.e. professional tyre fitter).

Gearbox Maintenance

Routine Maintenance

Recommended oil is EP100.



After the first 25 hours, check that the fixing bolts are properly tightened and that everything is correctly aligned.

Every 200 hours, the oil level should be checked and lubricant added if required.

Changing the Oil Lubrication

The first oil change should be carried out after a minimum of 50 or a maximum of 100 working hours. At the first oil change, we recommend that the gear case be washed out with diesel to flush out any microscopic debris. The breather and magnetic drain pugs should be cleaned at every oil change. Other oil changes should be made every 2500 working hours and at least once a year. If in doubt contact Hi-Spec Engineering or your Hi-Spec Dealer.

Under the feeder you will find an on/off valve on the gearbox, (Fig.15). Before operating your machine, ensure the valve is open (Fig.15). This valve is to assist you in changing gearbox oil and also in the event of the oil bottle becoming damaged it can be turned off to prevent further leakage (Fig.16).

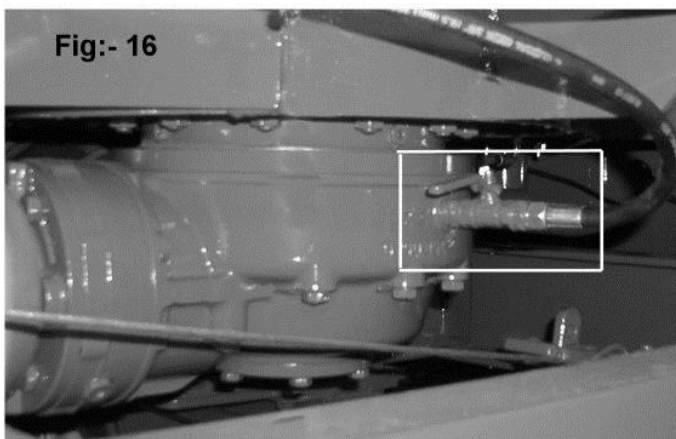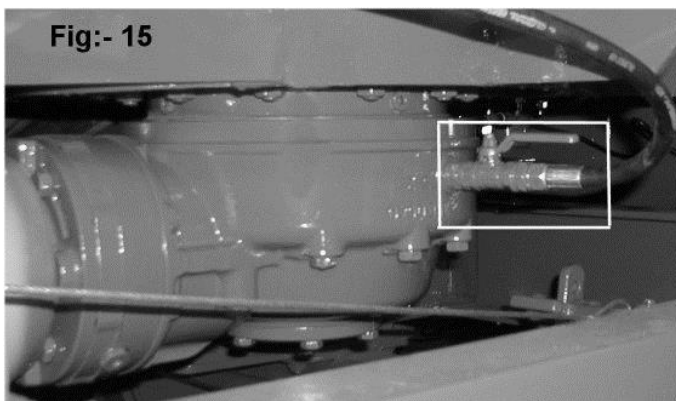

Elevator Maintenance


Adjustment of chain and slat elevator

Chain and slat type elevators need adjustment if the chains become excessively loose due to normal wear. Adjustment is achieved by tightening or loosening the adjusters that are locked on the side of the elevator.

1. Slacken the bolts fixing the adjustment plates to the elevator body.
2. Release the lock nuts (1) and using the adjuster nuts (2), tighten the chains equally.
3. Adjust a small amount at a time, $\frac{1}{4}$ turn adjustment each time is recommended.
4. Adjust so that the chain is firm but still a small amount of slackness to pull the chain by hand.
5. Replacement chains should be fitted when excess wear has occurred to insure the smooth running of your machine.

Caution

Do not over tighten chains. Breakage of chains may occur if over tightened.

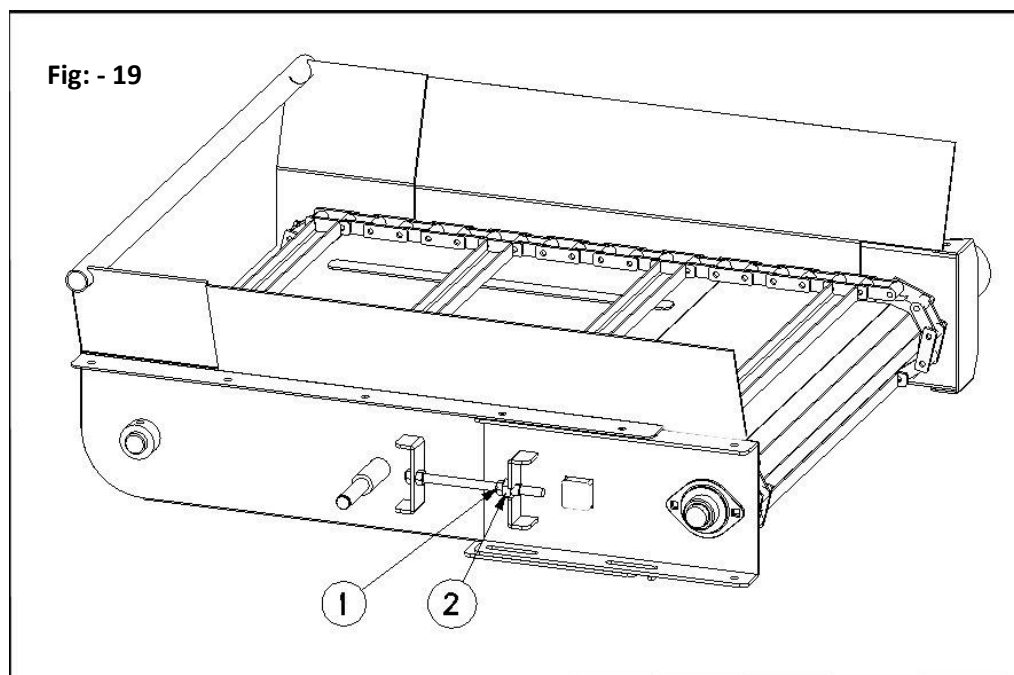

Greasing and Maintenance Points on Elevator

- Arm
- Slide bar
- Hydraulic rams
- Bearing
- Motor
- Hydraulic hoses

Greasing Points on Feeder

No. Machine Part

1. Counter Knife Rams
2. Door Rams
3. Door Slides
4. Chute Rams
5. PTO Shafts
6. Elevator
7. Elevator Arm
8. Elevator Ram




This symbol is found on each greasing point on the machine.

Maintenance Points on Feeder

No. Machine Part

1. Tyre Pressures
2. Road Wheel Nuts
3. Auger Knives
4. Auger Gearbox
5. Two Speed Gearbox
6. Oil Reservoir
7. Weighbar Bolts
8. Hydraulic Pipes

Greasing and Maintenance Points on Feeder

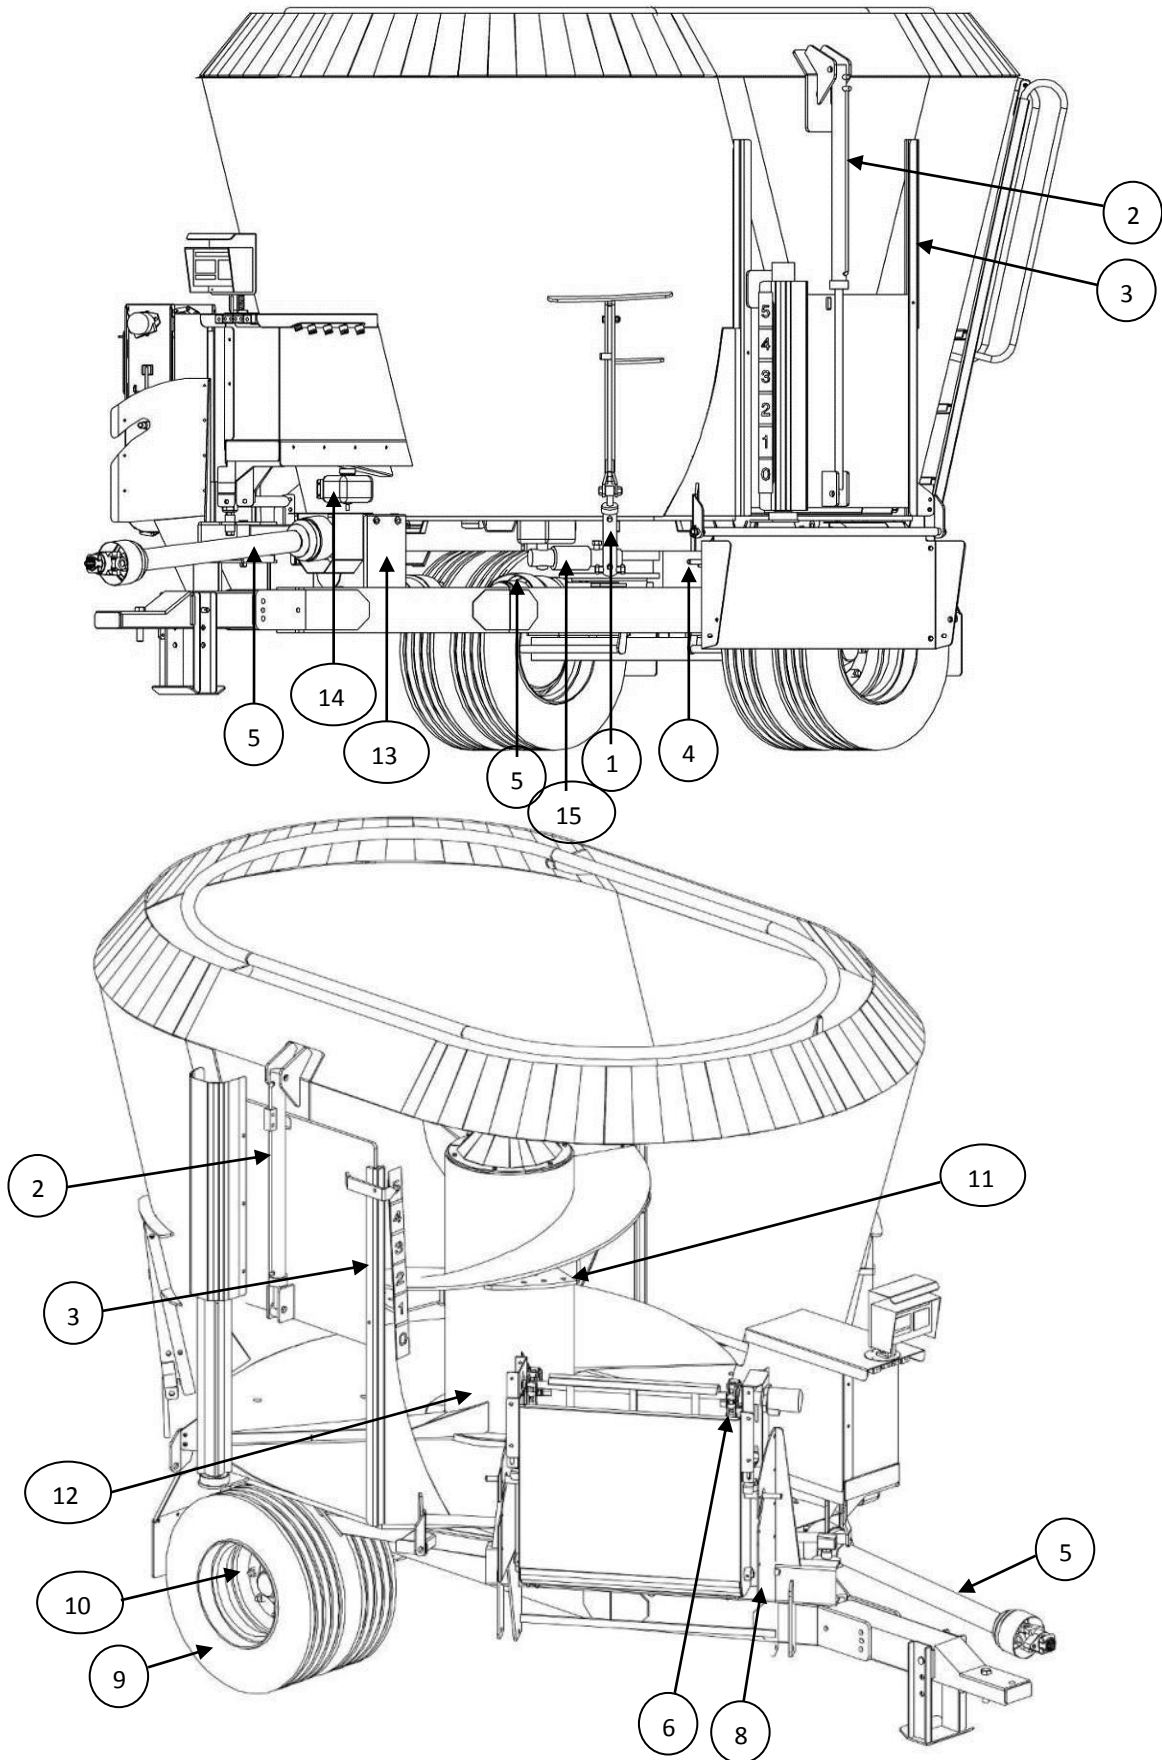

Troubleshooting

Feed out elevator hydraulics

* Read the sequence valve instructions listed at on page 74 before attempting to make any adjustments.

** To identify each sequence valve please see the diagram on page 75.

1. Problem: Elevator will move to the door position but will not drop to the feedout position.

Solution: Reduce the pressure setting in pressure sequence valve no. 1.

2. Problem: Elevator begins to drop before it reaches the door.

Solution: Increase the pressure setting in the pressure sequence valve no. 1.

3. Problem: Elevator folds up at the door but will not return to the transport position.

Solution: Reduce the pressure setting in the pressure sequence valve no. 2

4. Problem: Elevator begins to return to the transport position before it has folded up fully.

Solution: Increase the pressure setting in the pressure sequence valve no. 2.

5. Problem: Counter knives go out but door does not open or is very slow to open.

Solution: Reduce pressure setting in valve 3.

6. Problem: Door closes but counter knives will not go into body.

Solution: Reduce pressure setting in valve 4.

How to Adjust the Pressure Sequence Valves


1. Remove the cap using a no. 17 spanner.
2. Release the lock nut using a no. 17 spanner.
3. To **reduce** the pressure setting use a no. 6 hex key and turn the adjuster anti-clockwise (an eighth to a quarter of a turn is usually adequate).
4. To **increase** the pressure setting, turn the adjuster clockwise (an eighth to a quarter of a turn is usually adequate).
5. Re-tighten the lock nut.
6. Replace the cap.

Electrical Faults

1. Faults:
 - *Left hand door doesn't open.
 - *Left hand hydraulic chute doesn't work.
 - Elevator motor doesn't work.
- Possible Causes:
- No electrical power reaching solenoids.
 - Solenoids faulty.
- Check:
- Power supply from tractor.
 - Fuse in the control box.
 - Cable connections within the 3 pin plug.
 - Electrical cables for damage.
 - Cable connections at solenoid.

* Applies to a Vertical Auger Feeder fitted with twin discharge doors only.

Vertical Auger Feeder Hydraulic & Electrical Control box Details

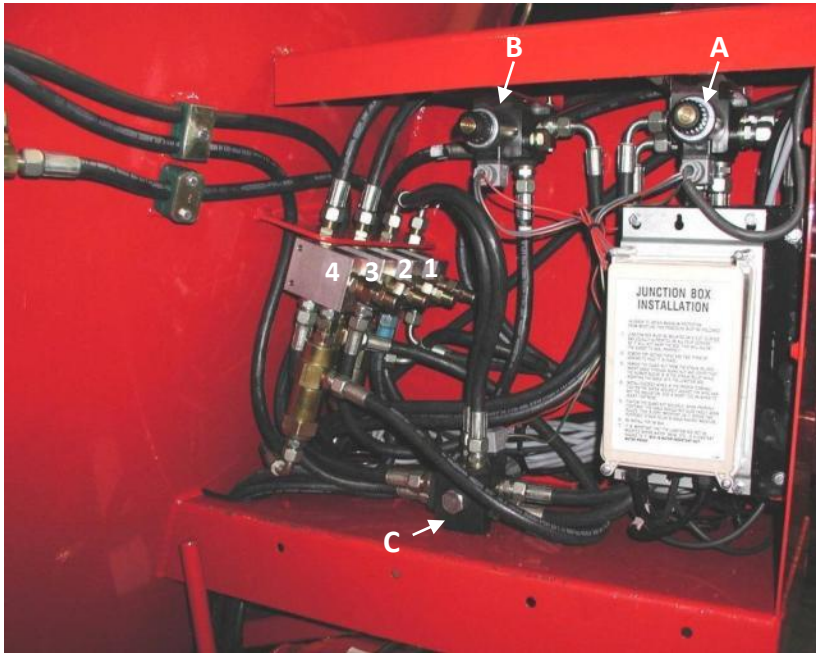

Type 1

- Index:**
- A:** Solenoid diverter valve for feedout chutes.
 - B:** Solenoid diverter valve for feedout doors.
 - C:** Solenoid diverter valve for elevator
 - D:** Solenoid valve block
 - E:** EV Driver box
 - 1,2,3,4:** Sequence valves – see below:
 - 1:** Elevator into work position | Elevator down
 - 2:** Elevator up | Elevator into the transport position
 - 3:** Counter knives out | Door/s open
 - 4:** Doors closed | Counter knives in



Type 2

Sales and Service

Ireland

Head office

Hi-Spec Engineering Ltd., Station Rd, Bagenalstown, Co. Carlow, Ireland

Tel: - +353 59 9721929 Fax: - +353 59 9721980

Email: - sales@hispec.net or info@hispec.net

After Sales Service

Contact: - Eoin Keane, Hi-Spec Engineering Ltd. Tel: - +353 87 2562963

Email: - eoin@hispec.net

Machine Servicing

Contact: - Michael Brennan, Hi-Spec Engineering Ltd. Tel: - +353 87 2403312

Spare Parts Store

Contact: Mike Nolan or Terence Byrne, Hi-Spec Engineering Ltd.

Tel: - +353 59 9721929 Fax: - +353 59 9721980

Email: - stores@hispec.net

U.K.

After Sales service:

Southern England & Wales

Contact: - Edward Lewis, Hi-Spec Engineering Ltd. Tel: - +44 7876 452698

Email: - elewis@hispec.net

Northern England & Scotland

Contact: - Gordon Brodie, Hi-Spec Engineering Ltd. Tel: - +44 7799 905130

Email: - gordon@hispec.net

For spare parts

Contact: - Your local Hi-Spec dealer. If you require a contact name and number you can telephone head office and we would be glad to assist you.

Warranty

The following is a list of warranty terms. Warranty claims will be disallowed if they do not fall into the categories shown here.

Warranty Terms

1 Year Warranty on Drive System, Bearings and Elevator Chain.

2 Years Warranty on Weighing System

NO Warranty on the following:

- ⊗ PTO Shafts
- ⊗ Hydraulic fittings
- ⊗ Hydraulic hoses
- ⊗ Electrical connections between machine and tractor

NO Warranty allowed for breakdowns due to:

- ⊗ Misuse of the machine, e.g. overloading by the operator
- ⊗ Lack of maintenance, e.g. failure to carry out regular oiling and greasing of components and bearings where appropriate

Conditions of Sale

General

In these conditions the word "Company" means Hi-Spec Engineering Limited. The word "dealer" means a customer of Hi-Spec Engineering Ltd. Purchasing machines from them for resale at recommended retail prices and the word "first user" means the first person to whom the dealer sells any goods for actual use. The company's employees may negotiate orders and issue quotations but an order is only binding on a company when it has acknowledged the order in writing on the company's official acknowledgement forms.

Such acknowledgement and confirmation will only be given subject to these conditions of sale. The acceptance of delivery of the goods either at the dealer's premises or those of the first user if delivered direct to the first user shall bind the dealer and the dealer shall only sell to the first user on conditions which incorporate the company's warranty. If he fails to sell the dealer shall have no claim whatsoever against the company except insofar as the company will honour the warranty to the dealer and through him to the first user. The term goods where used means such articles as are invoiced by the company whether manufactured, imported, distributed or otherwise sold by them.

Delivery

Should the company be prevented from delivering any goods owing to any lockout, strike, weather conditions, or other exceptional causes occurring either at their own premises, or elsewhere, then delivery shall be postponed until a reasonable time after the occurrence has ceased to cause delay, unless the parties shall mutually agree to the cancellation of the contract in respect of such goods.

Cancellation of Orders

The only ground for acceptance of a cancellation of an order shall be the non-acceptance of these terms and conditions by the dealer and then only if

Within seven days of receiving notification of the terms and conditions the dealer notifies the company in writing of its non-acceptance.

The dealer pays the company any losses suffered including any carriage charges if these have been incurred.

Delays

While every effort has been made to adhere to delivery dates or times quoted by the company, such dates or times given though given in good faith are mere estimates only. The company accepts no responsibility for delay in delivery or for the consequences of such delay however caused nor shall the dealer be entitled to reject goods thereof by reason.

Design

No responsibility is accepted for any deviation from drawings or from illustrations in catalogues, price lists, brochures or advertising material for discrepancies in weight, rated outputs. Performance from those mentioned here in which shall be treated as illustrative and approximate only.

Price

Any fluctuation in prices arising after the contract but before dispatch shall entail adjustment in the contract price and the price to be paid shall be fixed at the date of dispatch.

Damage, Shortage or Loss

The company do not accept any responsibility for any damage, shortage or loss in transit when goods are dispatched to instructions and where the transit is affected through a third party and not by the Company itself.

Conditions of Resale

The dealer shall only re-sell any of the company's products with the full and unaltered warranty that is issued with every machine invoiced by the company. If the dealer either through negligence or for any other cause fails to get the agreement of the first user to accept this warranty the dealer shall have no other recourse against the company except that contained in these conditions of sale. The dealer expressly agrees that in accepting delivery he has no recourse in law against the company nor will he join the company as third or other party in any action which results against him from the resale of the company's products.

Warranty

The Company warrants its products through the dealer and through the dealer to the first user. The dealer shall only re-sell the company's machines with the benefit of the company's warrants. The said warranty is as follows:

The company warrants, subject as hereinafter provided, that all new goods supplied by it shall be free from defects in material and workmanship, its liability under such warranty being limited to making good at a factory to be nominated by it, such parts or parts (which shall be within twelve calendar months from the date which the product was delivered new to the retail purchaser) be returned to the company or its authorised representative which the company is satisfied on its examination of the part or parts to have been defective in material or workmanship provided that. All replaced parts shall become the property of the company.

The foregoing warranty does not extend to any product which shall have been repaired, altered, neglected or used in any way so as, in the judgement of the company (whose decision is final) may have adversely affected its stability or reliability, nor does this warranty apply to proprietary articles, accessories or parts not manufactured by the company but where any such warranty is given by the manufacturers of such articles, accessories or parts any benefits under such warranty will be passed on by the company.

The company will not be responsible for damage or loss caused by incorrect machine settings, ground speed or operation of the machine in unsuitable conditions and the company's decision as to the suitability of the condition shall be final. Fair wear and tear is excluded from any claim and no responsibility whatsoever is accepted for damage, which in the company's Opinion is caused by hazards of soil, stones or foreign objects.

The warranty is transferable to a second or subsequent owner (within the warranty period) subject to the company being notified in writing of this change of ownership.

Complaints referring to faulty or incomplete deliveries or to obvious faults must be notified to the dealer in writing within fourteen days after receipt of goods. In the absence of such notification delivery shall be considered as having been accepted as in good order and condition.

The company does not give any warranty in respect of its goods except therefore going Warranty which is given expressly in lieu of and excludes all other warranties and conditions expressed or implied whether under common law, Statute or otherwise and every form of liability for loss or damage direct or consequential or for any accidents resulting from defective material faulty workmanship or otherwise, is expressly excluded.

Liability

In no circumstances whatsoever shall the Company's liability (in contract, tort or otherwise) to a buyer under, out of or in connection with this contract or the goods supplied exceed the invoice price of the particular goods in regard to which component is made.

Title of the Goods

The title in the goods shall not pass to the customer until the customer shall have discharged all sums due by the customer to the company at the date of the final handing over of the possessions of goods

Interest

If the customer shall fail to pay any sum due in foot of this transaction within fourteen days after the same shall become due, the customer shall pay interest thereon calculated from the due date of payment at the annual rate equal to 4% over the prime rate charged from time to time by the associated banks on secured loans to individual customers.

Registration Forms



Hi-Spec Engineering Ltd.
Station Rd., Bagenalstown,
Co. Carlow, Ireland
Tel: - 059 9721929
Fax: - 059 9721980

Please complete the following forms in full.

The first is a warranty registration form; this form is issued in accordance with our conditions of sale and with particular reference to the condition governing warranty. We cannot process a claim unless all particulars are supplied.

The second is an acceptance form, which the purchaser is asked to sign to acknowledge he/she has received a copy of the Operator manual and full training for the machine purchased.

Please do not sign if you have not received both of these.

Warranty Registration

Date of Purchase: _____
Purchaser's Name: _____
Signature: _____
Address: _____
Phone: _____
Dealer's Name: _____
Signature: _____
Address: _____
Phone: _____
Machine Type: Vertical Feeder _____
Machine Model: _____
Serial Number: _____

Training & Operator Manual Registration

Please sign the following declaration to state that on the day you (the purchaser) purchased a Hi-Spec Vertical Feeder you received an operator manual and training instructions.

I the purchaser have received my Hi-Spec Vertical Feeder Operator Manual and training from the below dealer.

Purchaser: _____	Signature: _____
Date: _____	
Dealer: _____	Signature: _____
Date: _____	

This copy is to be kept in your manual for your reference.



Registration Forms



Hi-Spec Engineering Ltd.
Station Rd., Bagenalstown,
Co. Carlow, Ireland
Tel: - 059 9721929
Fax: - 059 9721980

Please complete the following forms in full.

The first is a warranty registration form; this form is issued in accordance with our conditions of sale and with particular reference to the condition governing warranty. We cannot process a claim unless all particulars are supplied.

The second is an acceptance form, which the purchaser is asked to sign to acknowledge he/she has received a copy of the Operator manual and full training for the machine purchased.

Please do not sign if you have not received both of these.

Warranty Registration

Date of Purchase: _____
Purchaser's Name: _____
Signature: _____
Address: _____
Phone: _____
Dealer's Name: _____
Signature: _____
Address: _____
Phone: _____
Machine Type: Vertical Feeder
Machine Model: _____
Serial Number: _____

Training & Operator Manual Registration

Please sign the following declaration to state that on the day you (the purchaser) purchased a Hi-Spec Vertical Feeder you received an operator manual and training instructions.

I the purchaser have received my Hi-Spec Vertical Feeder Operator Manual and training from the below dealer.

Purchaser: _____	Signature: _____
Date: _____	
Dealer: _____	Signature: _____
Date: _____	

This copy is to be posted to Hi-Spec Engineering or given to your dealer



Declaration of Conformity

EC Machinery Directive

2006/42/EC

We hereby certify that the machinery stipulated below complies with all relevant provisions of the EC Machinery Directive.

Modifications to the machine without prior approval from the undersigned will render this declaration null and void.

Machine Description and Function:	Vertical Feeder designed to mix and dispense feed
Make:	Hi-Spec
Model:	V7, V10, V12, V14, V16, T14, T16, T18, T20, T24, T27, T32
Serial Number:	
Manufacturer:	Hi-Spec Engineering Ltd.
Address:	Station Rd, Bagenalstown, Co. Carlow, Ireland

Technical file compiled by: Derek Whelan, Myshall, Co. Carlow

Harmonised standards applied:

EN ISO 12100-1:2003, Safety of machinery Part 1: Basic terminology, methodology

EN ISO 12100-2:2003, Safety of machinery Part 2: Technical principles

EN ISO 4254-1:2005, Agricultural machinery -- Safety -- Part 1: General requirements

EN ISO 14121-1:2007, Safety of Machinery – Principle of Risk Assessment

BS EN 703:2004+A1:2009, Agricultural machinery – Silage loading, mixing and distributing machines - safety

Signed: _____

Date: **28th November 2014**

Name: **Mike Nolan**

Position: **Managing Director**

Being the responsible person appointed by the manufacturer.

Hi-Spec Engineering reserve the right to make changes and improvements at any time without incurring any obligation to make such changes on products previously sold.




Auger Knife Replacement List

Augers (as of October 2011)



	Part No.	Description
	VF/0025	Complete Auger (please state machine model and year)
1	VF/0058	Auger cap
2	GP/1015	M10x30 Bolt
3	VF/0009	knife
4	VF/0009s	Small Knife Support Plate
5a	GP/1016	M10x40 Bolt
5b	GP/1097	M10 Nut
6a	MM/10551	M20x70 CSK bolt
6b	GP/1100	M20 Nut

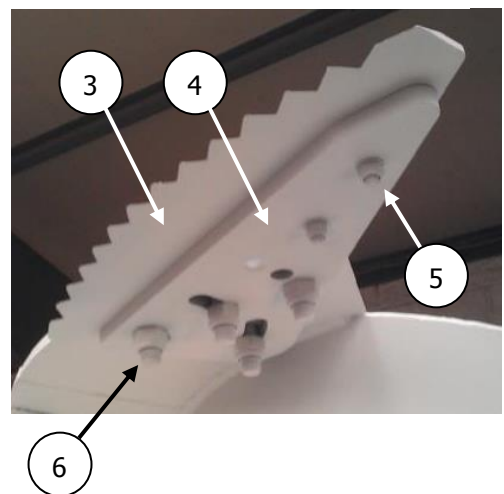

Notes